

ESM-QM87

Intel BGA Type CPU QM87 COM Express Type 6 Module

User's Manual

1st Ed – 20 January 2014

Copyright Notice

Copyright © 2014 Avalue Technology Inc., ALL RIGHTS RESERVED.

Part No. E2047286800R

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

Copyright © 2014 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

CONTENT

1. Getting Started	7
1.1 Safety Precautions	7
1.2 Packing List	7
1.3 Document Amendment History	8
1.4 Manual Objectives	9
1.5 System Specifications	10
1.6 Architecture Overview—Block Diagram	11
2. Hardware Configuration	12
2.1 Product Overview	13
2.2 Installation Procedure	15
2.2.1 Main Memory	16
2.3 Connector List	18
2.4 Setting Jumpers & Connectors	19
2.4.1 AT/ATX mode selector (SW1)	19
2.4.1.1 Signal Description –AT/ATX mode selection	19
2.4.2 COM Express Connector 1 (CN1A)	20
2.4.2.1 Signal Description – COM Express Connector 1 (CN1A)	24
2.4.2.1.1 Audio Signals	24
2.4.2.1.2 Gigabit Ethernet Signals	24
2.4.2.1.3 GPIO Signals	24
2.4.2.1.4 Flat Panel LVDS Signals	25
2.4.2.1.5 LPC Signals	25
2.4.2.1.6 Miscellaneous Signals	25
2.4.2.1.7 PCI Express Signals	25
2.4.2.1.8 Power Signals	26
2.4.2.1.9 Power & System Management Signals	26
2.4.2.1.10 SATA Signals	27
2.4.2.1.11 VGA Signals	27
2.4.2.1.12 USB Signals	27
2.4.3 COM Express Connector 2 (CN1B)	28
2.4.3.1 Signal Description – COM Express Connector 2 (CN1B)	32
2.4.3.1.1 USB3.0 Signals	32
2.4.3.1.2 PEG Signals	32
2.4.3.1.3 DDI Signals	32

2.5	ESD/EMI solutions	33
3	BIOS Setup	36
3.1	Introduction	37
3.2	Starting Setup	37
3.3	Using Setup	38
3.4	Getting Help	39
3.5	In Case of Problems	39
3.6	BIOS setup	40
3.6.1	Main Menu	40
3.6.1.1	System Language	41
3.6.1.2	System Date	41
3.6.1.3	System Time	41
3.6.2	Advanced Menu	42
3.6.2.1	APCI Settings	42
3.6.2.2	S5 RTC Wake Settings	43
3.6.2.2.1	Wake system with Fixed Time	44
3.6.2.3	Trusted Computing	44
3.6.2.4	CPU Configuration	45
3.6.2.5	SATA Configuration	47
3.6.2.5.1	Software Feature Mask Configuration	48
3.6.2.6	Intel® Rapid Start Technology	49
3.6.2.7	PCH-FW Configuration	49
3.6.2.7.1	Firmware Update Configuration	50
3.6.2.8	AMT Configuration	50
3.6.2.9	USB Configuration	51
3.6.2.10	H/W Monitor (IT8518)	52
3.6.2.11	Super IO Configuration	52
3.6.2.11.1	Serial Port 1 Configuration	53
3.6.2.11.2	Serial Port 2 Configuration	54
3.6.2.11.3	Parallel Port Configuration	55
3.6.2.12	Network Stack	56
3.6.2.13	Intel RC Drivers Version Detail	57
3.6.2.14	Intel Ethernet Connection I217-LM	57
3.6.2.14.1	NIC Configuration	58
3.6.3	Chipset	59
3.6.3.1	PCH-IO Configuration	59
3.6.3.1.1	PCI Express Configuration	60
3.6.3.1.2	USB Configuration	61
3.6.3.1.3	PCH Azalia Configuration	62
3.6.3.2	System Agent (SA) Configuration	62

ESM-QM87

3.6.3.2.1	Graphics Configuration	63
3.6.3.2.2	Memory Configuration.....	65
3.6.4	Boot	66
3.6.4.1	CSM parameters.....	67
3.6.5	Security.....	68
3.6.6	Save and exit.....	69
3.6.6.1	Save Changes and Reset.....	69
3.6.6.2	Discard Changes and Reset	69
3.6.6.3	Restore Defaults.....	69
4.	Drivers Installation.....	70
4.1	Install Chipset Driver (For Intel QM87).....	71
4.2	Install Display Driver (For Intel QM87)	73
4.3	Install LAN Driver (For Intel I217LM).....	75
4.4	Install USB 3.0 Driver	77
4.5	Install ME Driver	79
5.	Mechanical Drawing	80

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x Intel BGA Type CPU QM87 COM Express Type 6 Module
- 1 x Quick Installation Guide
- 1 x DVD-ROM contains the followings:
 - User's Manual (this manual in PDF file)
 - Chipset and Ethernet driver



If any of the above items is damaged or missing, contact your retailer.

1.3 Document Amendment History

Revision	Date	By	Comment
1st	January 2014	Avalue	Initial Release

1.4 Manual Objectives

This manual describes in details Avalue Technology ESM-QM87 Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up ESM-QM87 series or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the NVRAM that make booting impossible. If this should happen, clear the NVRAM settings, (see the description of the Jumper Settings for details).


If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.5 System Specifications

System	
CPU	Intel Haswell Processor (25~ 47W CPU)
BIOS	AMI uEFI 128M-bit Flash ROM
System Chipset	Intel QM87
System Memory	Two 204-pin DDR3L SODIMM socket, supports up to 16GB 1333/1600 SDRAM
Expansion	7 PCIe x 1, 1 PCIe x 16
I/O	
MIO	4 x Serial ATA ports SMBus, LPC
USB	8 x USB 2.0 , 4 x USB 3.0ports
DIO	4-bit GPI, 4-bit GPO
Display	
Chipset	Intel QM87
Resolution	CRT Mode:1920 x 1200
	LCD/ Simultaneous Mode: 1920 x 1200
LVDS	Dual channel 18/24-bit LVDS -Chrontel CH7511B(eDP to LVDS)
Display Supported	3 display pipes supported (VGA, LVDS, DDI)
Audio	
Interface	Intel High Definition Audio
Ethernet	
LAN Chip	Intel I217LM GbE PHY
Ethernet Interface	10/100/1000 Base-Tx Gigabit Ethernet Compatible
Mechanical & Environmental	
Power Requirement	+9 ~ +19V
ACPI	Single power ATX Support S0, S3, S4, S5 ACPI 3.0 Compliant
Power Type	AT/ATX
Operating Temp.	0 to 60°C
Storage Temp.	-40 ~-75°C
Operating Humidity	0% ~ 90% relative humidity, non-condensing
Size (L x W)	125 mm x 95 mm
Weight	0.44lbs(0.2kg)


1.6 Architecture Overview—Block Diagram


The following block diagram shows the architecture and main components of ESM-QM87.

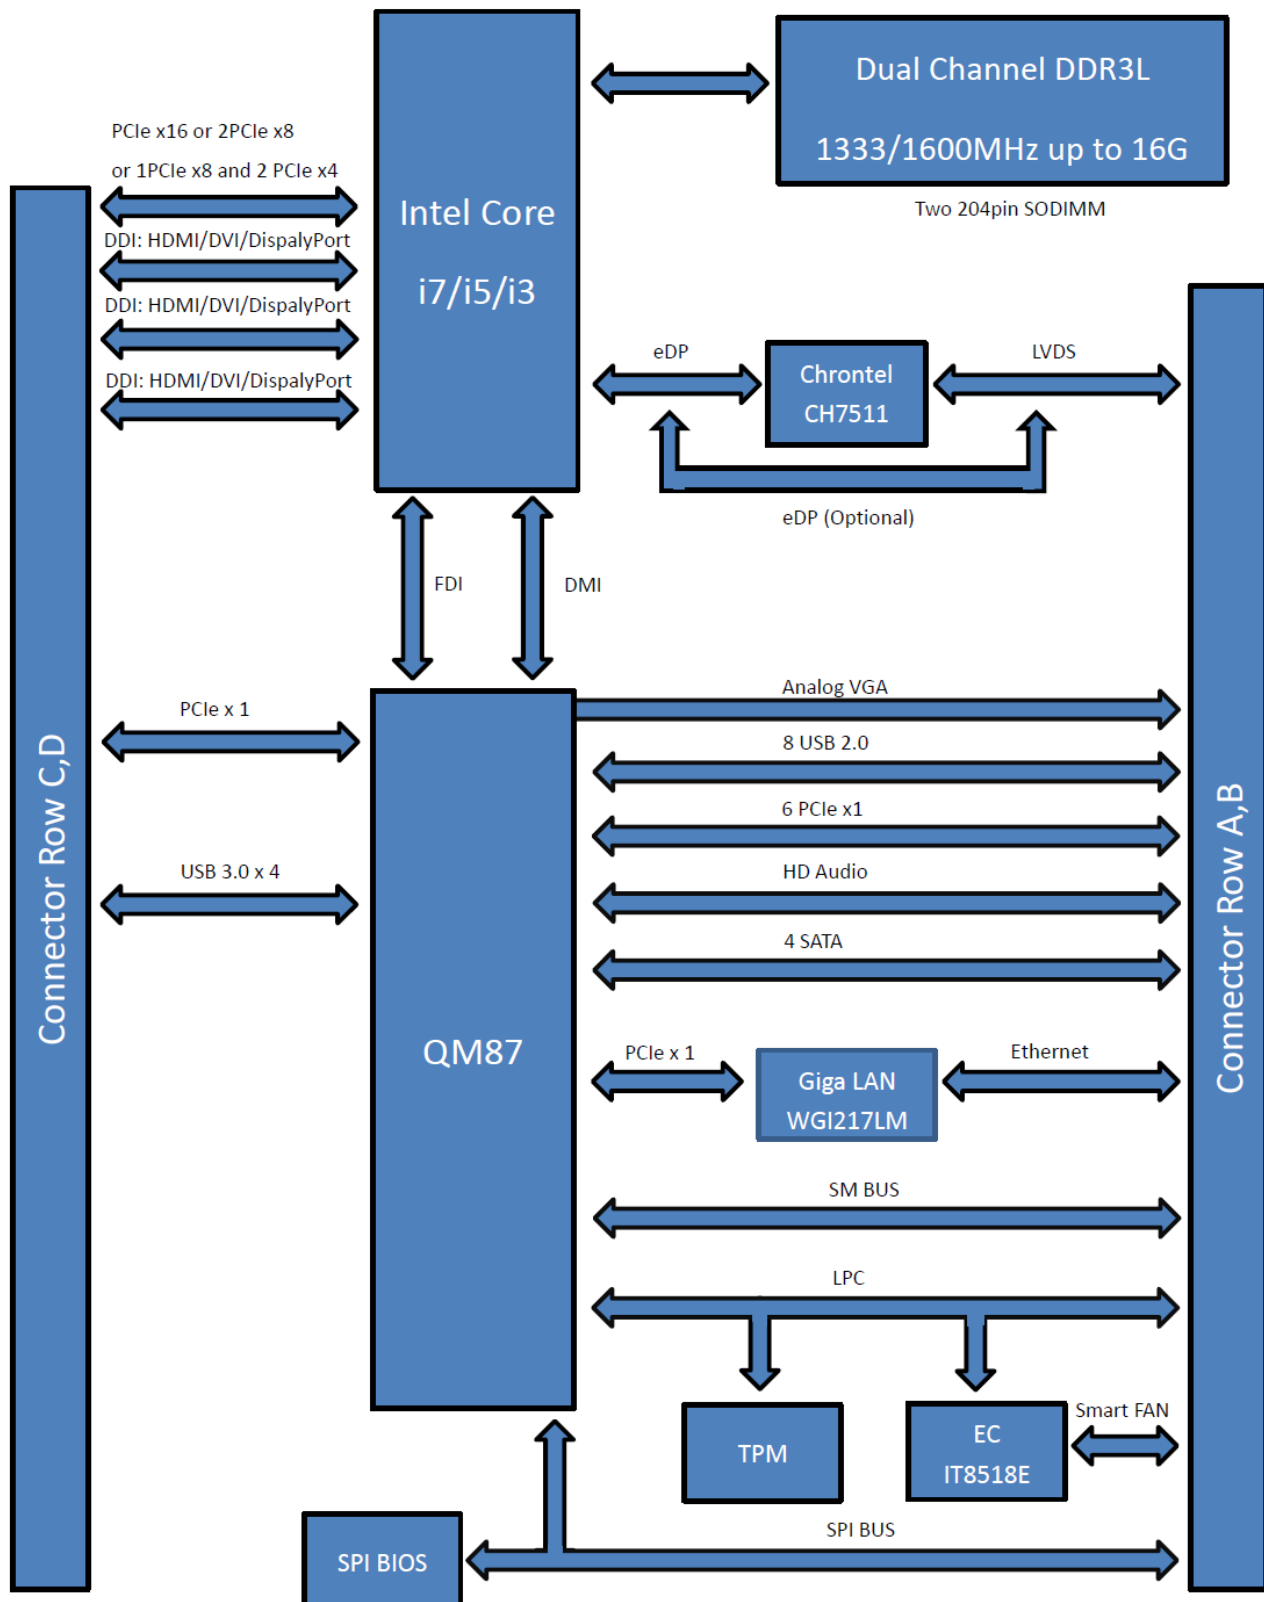

2. Hardware Configuration

2.1 Product Overview

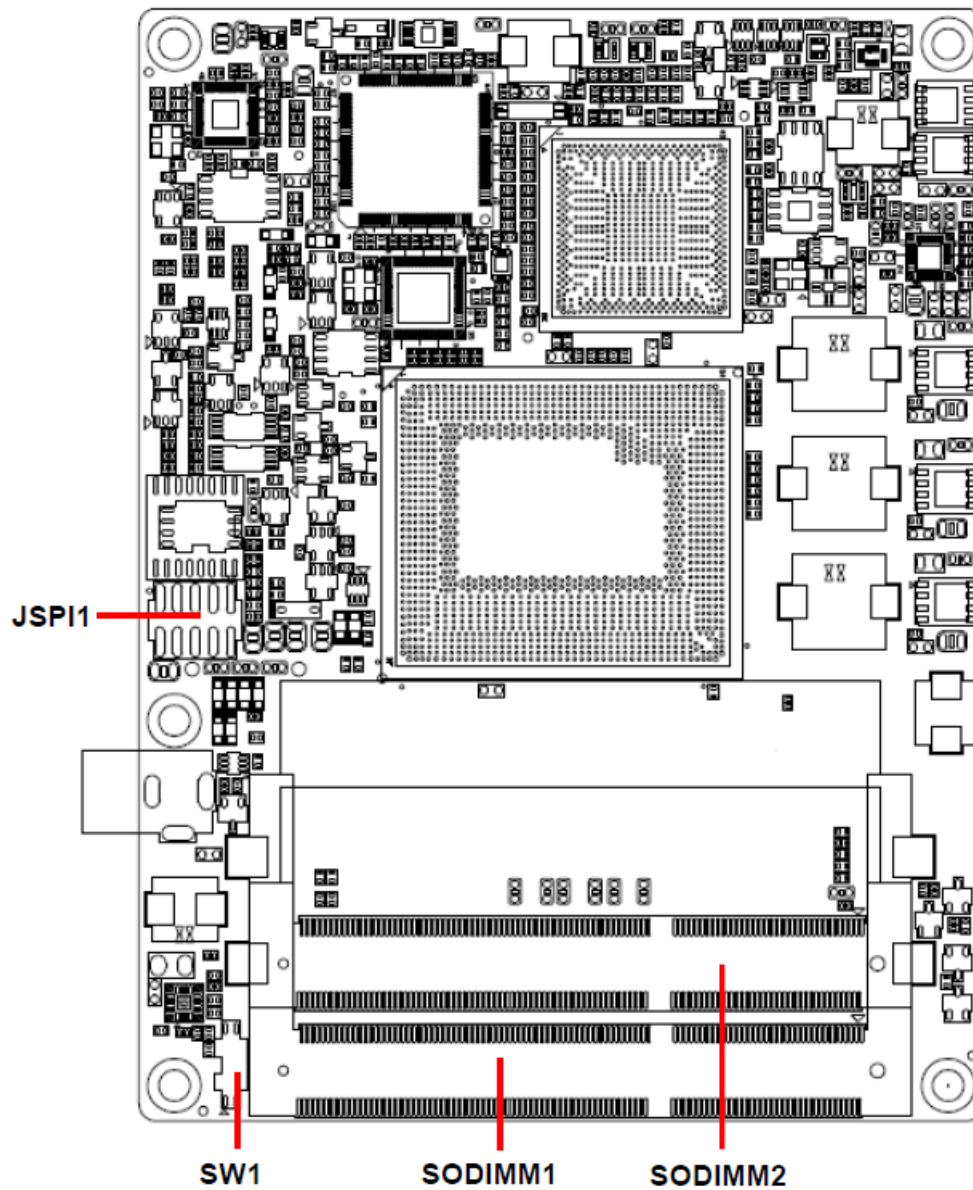

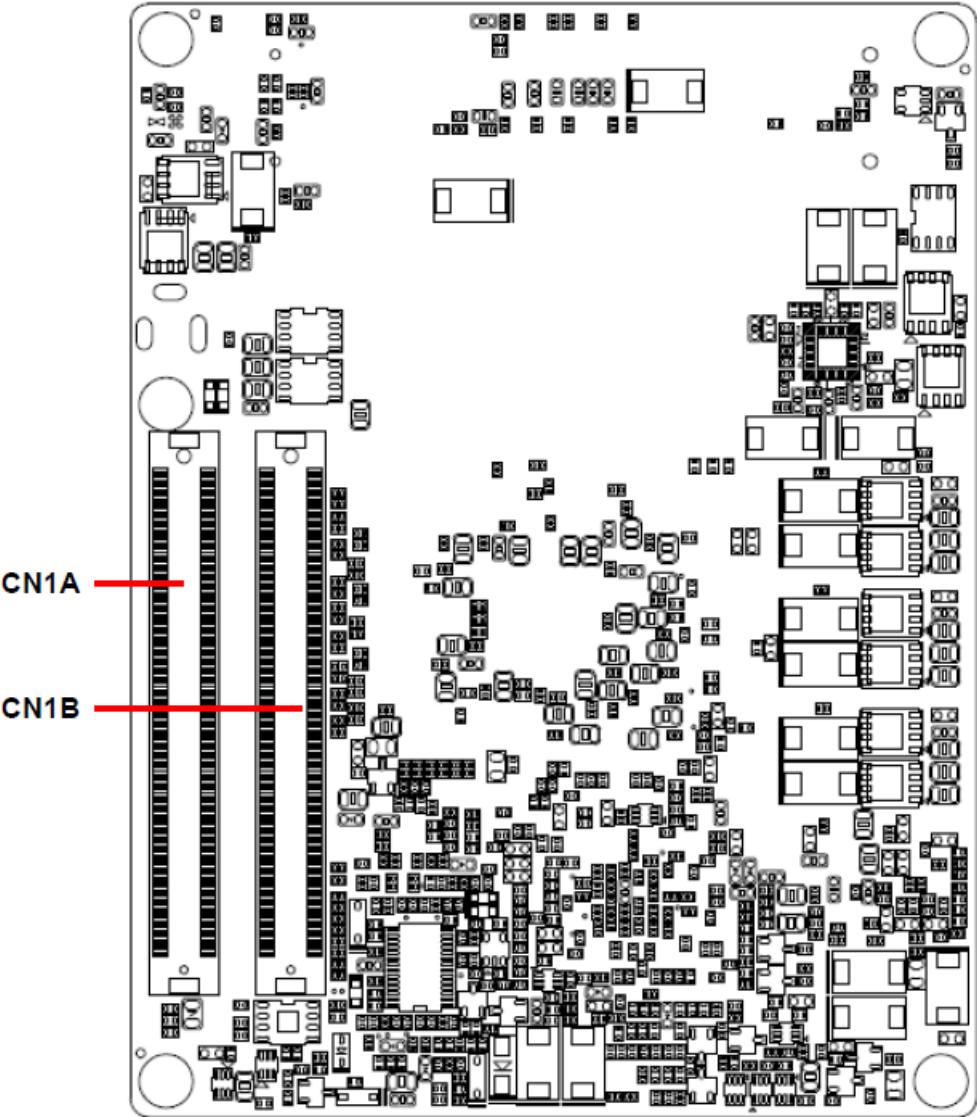

2.2 Installation Procedure


This chapter explains you the instructions of how to setup your system.

1. Turn off the power supply.
2. Insert the DIMM module (be careful with the orientation).
3. Insert all external cables for hard disk, keyboard, mouse, USB etc. except for flat panel. A CRT monitor must be connected in order to change NVRAM settings to support flat panel.
4. Connect power supply to the board via the ATXPWR.
5. Turn on the power.
6. Enter the BIOS setup by pressing the delete key during boot up. Use the "Save & Exit \ Restore Defaults" feature.
7. If TFT panel display is to be utilized, make sure the panel voltage is correctly set before connecting the display cable and turning on the power.

ESM-QM87



2.2.1 Main Memory

ESM-QM87 provides two 204-pin SODIMM socket, supports up to 16GB DDR3L 1333/1600 SDRAM

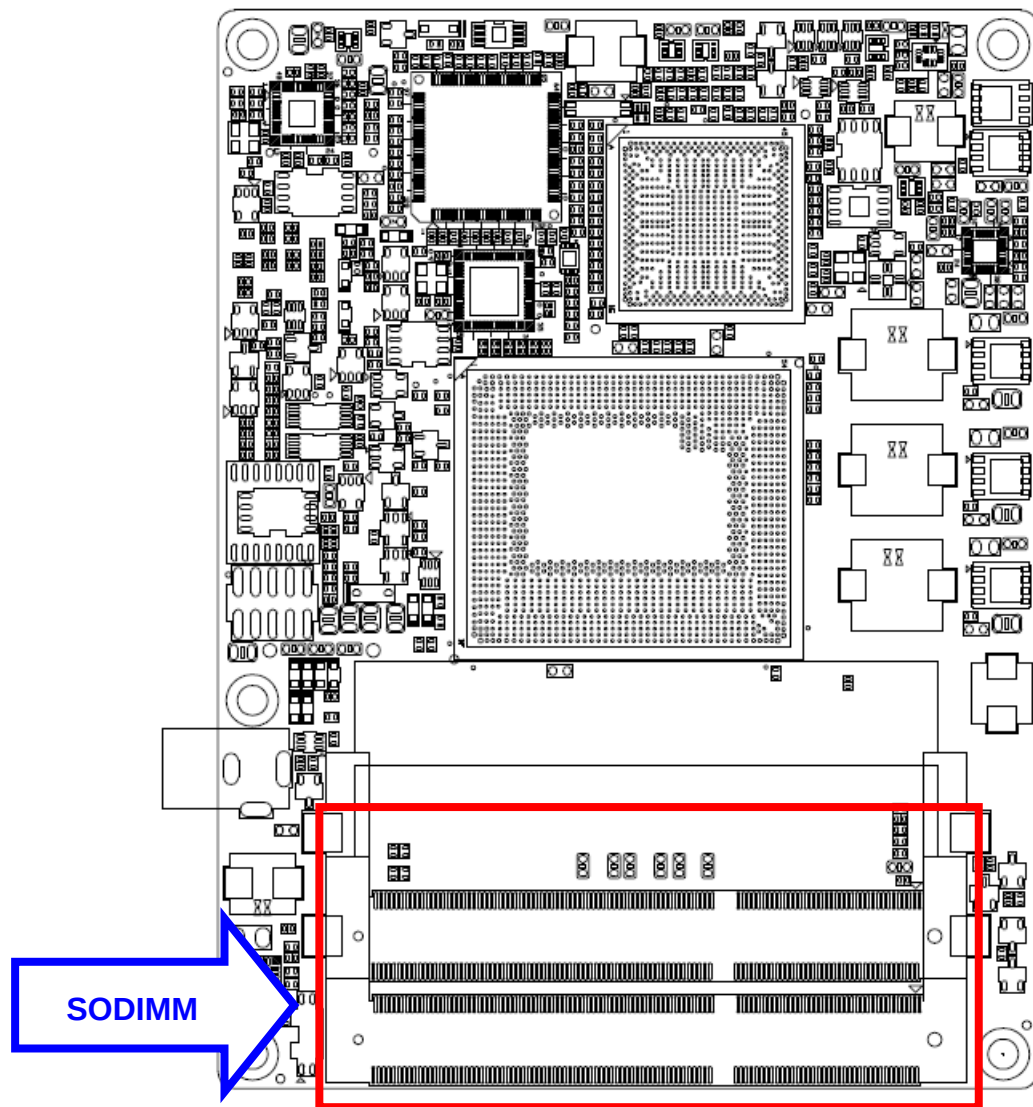

Make sure to unplug the power supply before adding or removing DIMMs or other system components. Failure to do so may cause severe damage to board and components.

- Locate the SODIMM socket on the board.
- Carefully hold two edges of the SODIMM module. avoid touching its connectors.
- Align the notch key on the module with the rib on the slot.
- Firmly press the modules into the socket which automatically snaps into the mounting notch. Do not force the SODIMM module in with extra force as the SODIMM module only fits in one direction.

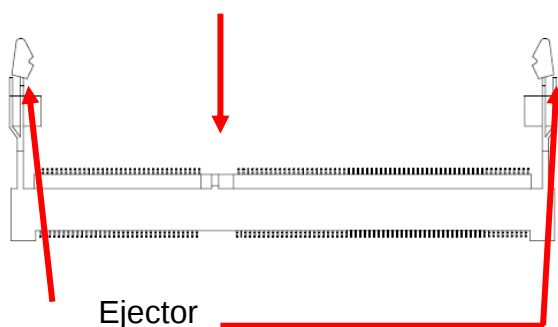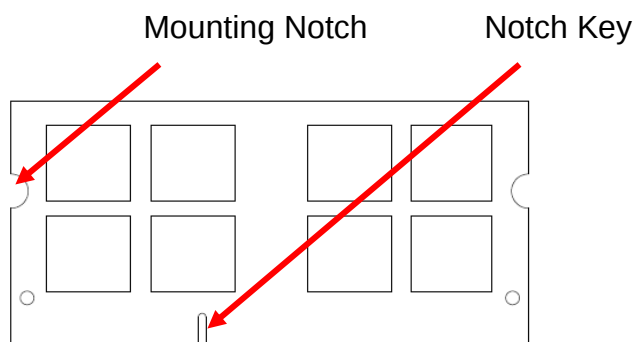

204-pin DDR3L SODIMM

- To remove SODIMM modules, simultaneously push the two ejector tabs outward, then pull out the SODIMM module.




Note:

- (1) Please do not change any DDR3L SDRAM parameter in BIOS setup to increase your system's performance without acquiring technical information in advance.
- (2) Static electricity can damage the electronic components of the computer or optional boards. Before proceeding, ensure that you are discharged of static electricity by briefly touching a grounded metal object.

2.3 Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

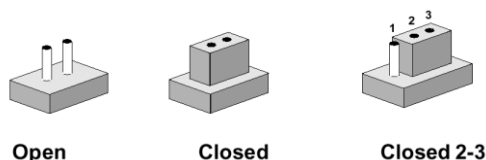

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.


The following tables list the function of each of the board’s jumpers and connectors.

Connectors

Label	Function	Note
JSPI1	(Reserved for BIOS programming)	5 x 2 header, pitch 2.00mm
CN1A	COM Express connector 1	
CN1B	COM Express connector 2	
SODIMM1	204-pin DDR3L SDRAM DIMM socket	
SODIMM2	204-pin DDR3L SDRAM DIMM socket	
SW1	AT/ATX mode selector	

2.4 Setting Jumpers & Connectors

2.4.1 AT/ATX mode selector (SW1)

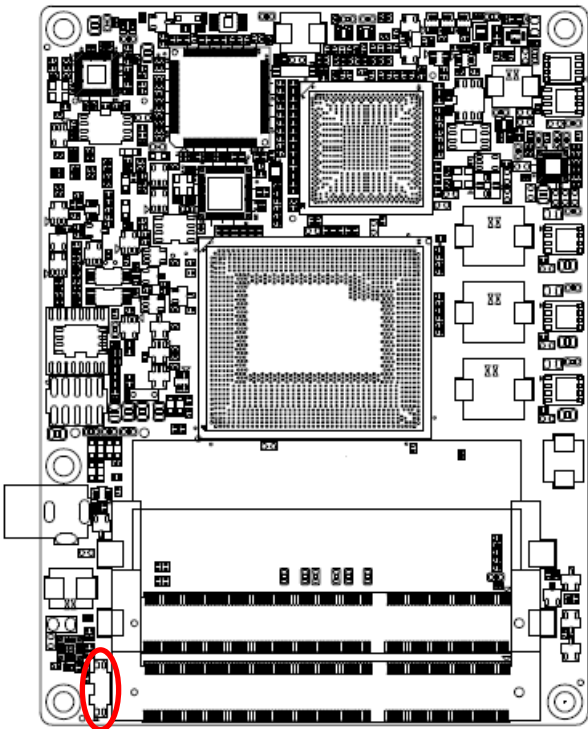


*Default


AT/ATX mode



AT mode





ATX mode*



2.4.1.1 Signal Description –AT/ATX mode selection



AT/ATX mode	Description
AT mode on 1 2	Auto-power on, no need to press Power button to enable power on/off
ATX mode on 1 2	Press the power button to enable power on/off

2.4.2 COM Express Connector 1 (CN1A)

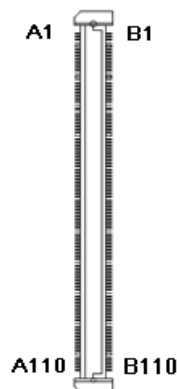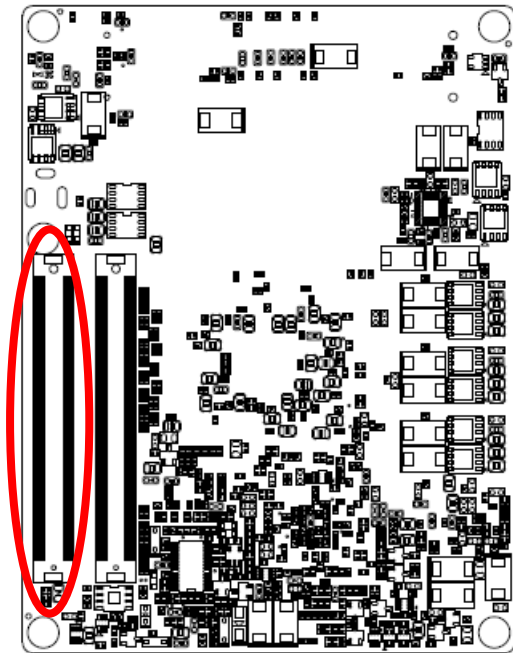



Signal	PIN	PIN	Signal
GND	A1	B1	GND
GBE0_MDI3-	A2	B2	GBE0_ACT#
GBE0_MDI3+	A3	B3	LPC_FRAME#
GBE0_LINK100#	A4	B4	LPC_AD0
GBE0_LINK1000#	A5	B5	LPC_AD1
GBE0_MDI2-	A6	B6	LPC_AD2
GBE0_MDI2+	A7	B7	LPC_AD3
GBE0_LINK#	A8	B8	LPC_DRQ0#
GBE0_MDI1-	A9	B9	LPC_DRQ1#
GBE0_MDI1+	A10	B10	LPC_CLK
GND	A11	B11	GND
GBE0_MDI0-	A12	B12	PWRBTN#
GBE0_MDI0+	A13	B13	SMB_CK
GBE0_CTREF	A14	B14	SMB_DAT
SUS_S3#	A15	B15	SMB_ALERT#
SATA0_TX+	A16	B16	SATA1_TX+
SATA0_TX-	A17	B17	SATA1_TX-
SUS_S4#	A18	B18	SUS_STAT#
SATA0_RX+	A19	B19	SATA1_RX+
SATA0_RX-	A20	B20	SATA1_RX-
GND	A21	B21	GND
SATA2_TX+	A22	B22	SATA3_TX+
SATA2_TX-	A23	B23	SATA3_TX-
SUS_S5#	A24	B24	PWR_OK
SATA2_RX+	A25	B25	SATA3_RX+
SATA2_RX-	A26	B26	SATA3_RX-
BATLOW#	A27	B27	WDT
(S)ATA_ACT#	A28	B28	HDA_SDIN2
HDA_SYNC	A29	B29	HDA_SDIN1
HDA_RST#	A30	B30	HDA_SDIN0

Quick Installation Guide

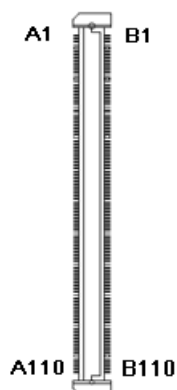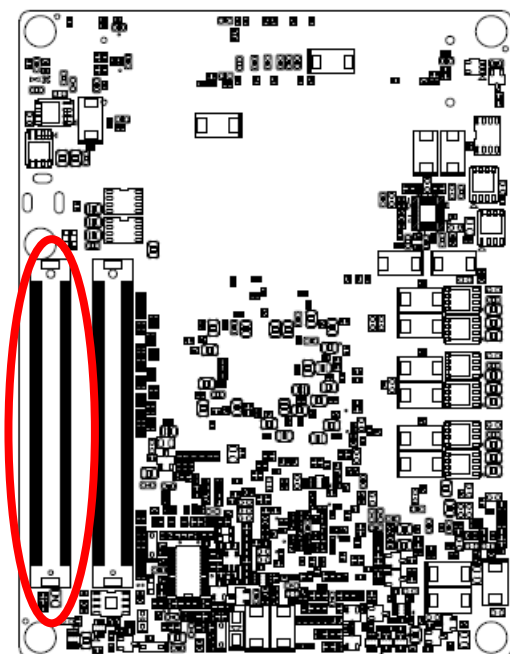



Signal	PIN	PIN	Signal
GND	A31	B31	GND
HDA_BITCLK	A32	B32	SPKR
HDA_SDOOUT	A33	B33	NC
BIOS_DIS0#	A34	B34	NC
NC	A35	B35	NC
USB6-	A36	B36	USB7-
USB6+	A37	B37	USB7+
USB_6_7_OC#	A38	B38	USB_4_5_OC#
USB4-	A39	B39	USB5-
USB4+	A40	B40	USB5+
GND	A41	B41	GND
USB2-	A42	B42	USB3-
USB2+	A43	B43	USB3+
USB_2_3_OC#	A44	B44	USB_0_1_OC#
USB0-	A45	B45	USB1-
USB0+	A46	B46	USB1+
VCC_RTC	A47	B47	EXCD1_PERST#
EXCD0_PERST#	A48	B48	EXCD1_CPPE#
EXCD0_CPPE#	A49	B49	SYS_RESET#
LPC_SERIRQ	A50	B50	CB_RESET#
GND	A51	B51	GND
PCIE_TX5+	A52	B52	PCIE_RX5+
PCIE_TX5-	A53	B53	PCIE_RX5-
GPI0	A54	B54	GPO1
PCIE_TX4+	A55	B55	PCIE_RX4+
PCIE_TX4-	A56	B56	PCIE_RX4-
GND	A57	B57	GPO2
PCIE_TX3+	A58	B58	PCIE_RX3+
PCIE_TX3-	A59	B59	PCIE_RX3-
GND	A60	B60	GND

ESM-QM87

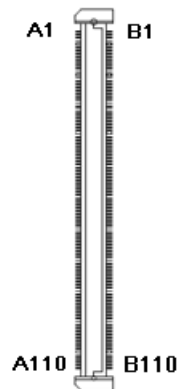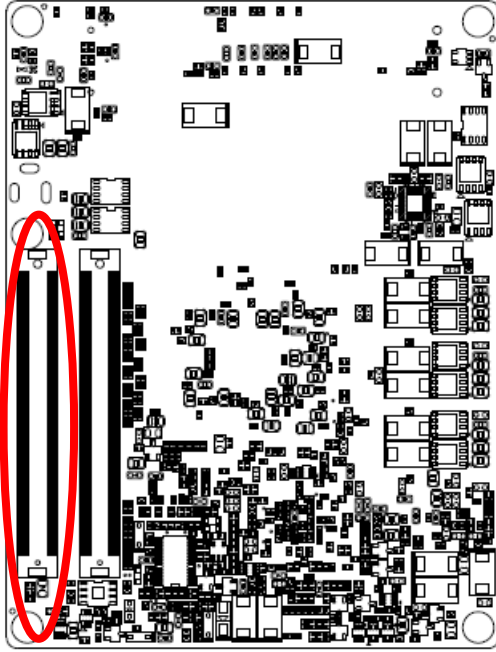

Signal	PIN	PIN	Signal
PCIE_TX2+	A61	B61	PCIE_RX2+
PCIE_TX2-	A62	B62	PCIE_RX2-
GPI1	A63	B63	GPO3
PCIE_TX1+	A64	B64	PCIE_RX1+
PCIE_TX1-	A65	B65	PCIE_RX1-
GND	A66	B66	WAKE0#
GPI2	A67	B67	WAKE1#
PCIE_TX0+	A68	B68	PCIE_RX0+
PCIE_TX0-	A69	B69	PCIE_RX0-
GND	A70	B70	GND
LVDS_A0+	A71	B71	LVDS_B0+
LVDS_A0-	A72	B72	LVDS_B0-
LVDS_A1+	A73	B73	LVDS_B1+
LVDS_A1-	A74	B74	LVDS_B1-
LVDS_A2+	A75	B75	LVDS_B2+
LVDS_A2-	A76	B76	LVDS_B2-
LVDS_VDD_EN	A77	B77	LVDS_B3+
LVDS_A3+	A78	B78	LVDS_B3-
LVDS_A3-	A79	B79	LVDS_BKLT_EN
GND	A80	B80	GND
LVDS_A_CK+	A81	B81	LVDS_B_CK+
LVDS_A_CK-	A82	B82	LVDS_B_CK-
NC	A83	B83	LVDS_BKLT_CTRL
NC	A84	B84	VCC_5V_SBY_1
GPI3	A85	B85	VCC_5V_SBY_2
RSVD1	A86	B86	VCC_5V_SBY_3
RSVD2	A87	B87	VCC_5V_SBY_4
PCIE_CLK_REF+	A88	B88	BIOS_DIS1#
PCIE_CLK_REF--	A89	B89	VGA_RED
GND	A90	B90	GND

Quick Installation Guide

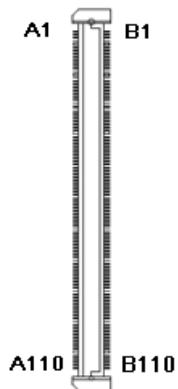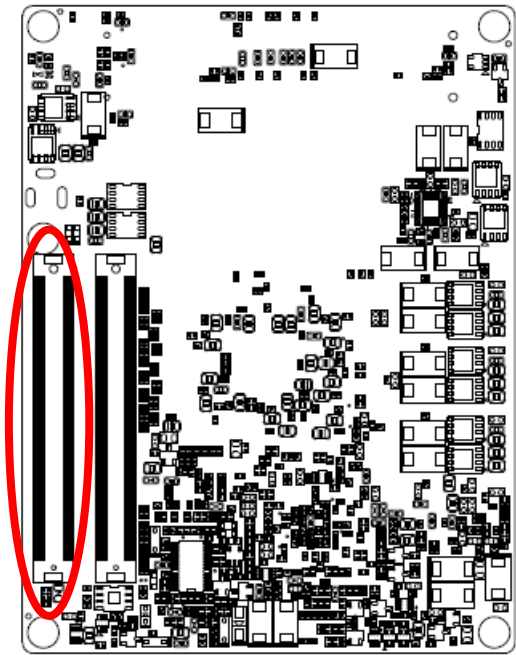

Signal	PIN	PIN	Signal
SPI_POWER	A91	B91	VGA_GRN
SPI_MISO	A92	B92	VGA_BLU
GPO0	A93	B93	VGA_HSYNC
SPI_CLK	A94	B94	VGA_VSYNC
SPI_MOSI	A95	B95	VGA_I2C_CK
PP_TPM	A96	B96	VGA_I2C_DAT
TYPE10#	A97	B97	SPI_CS#
NC	A98	B98	RSVD3
NC	A99	B99	RSVD4
GND	A100	B100	GND
NC	A101	B101	FAN_PWMOUT
NC	A102	B102	FAN_TACHIN
LID#	A103	B103	SLEEP#
VCC	A104	B104	VCC
VCC	A105	B105	VCC
VCC	A106	B106	VCC
VCC	A107	B107	VCC
VCC	A108	B108	VCC
VCC	A109	B109	VCC
GND	A110	B110	GND

2.4.2.1 Signal Description – COM Express Connector 1 (CN1A)

2.4.2.1.1 Audio Signals

Signal	Signal Description
HDA_SYNC	HD Audio Sync
HDA_RST#	HD Audio Reset
HDA_SDIN[0:2]	Audio CODEC Serial Data
HDA_BITCLK	HD Audio Clock
HDA_SDOUT	HD Audio Data

2.4.2.1.2 Gigabit Ethernet Signals

Signal	Signal Description			
GBE0_MD[0:3] +/-	Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0,1,2,3. The MDI can operate in 1000, 100 and 10 Mbit / sec modes. Some pairs are unused in some modes, per the following:			
		1000B-T	100B-T	10B-T
	MDI[0]+/-	B1_DA+/-	TX+/-	TX+/-
	MDI[1]+/-	B1_DB+/-	RX+/-	RX+/-
	MDI[2]+/-	B1_DC+/-	X	X
	MDI[3]+/-	B1_DD+/-	X	X
GBE0_ACT#	Gigabit Ethernet Controller 0 activity indicator, active low.			
GBE0_Link#	Gigabit Ethernet Controller 0 link indicator, active low.			
GBE0_Link100#	Gigabit Ethernet Controller 0 100 Mbit / sec link indicator, active low.			
GBE0_Lin1000#	Gigabit Ethernet Controller 0 1000 Mbit / sec link indicator, active low.			

2.4.2.1.3 GPIO Signals

Signal	Signal Description
GPI[0:4]	General purpose input pins.
GPO[0:4]	General purpose output pins.

2.4.2.1.4 Flat Panel LVDS Signals

Signal	Signal Description
LVDS_BKLT_CTRL	Controls panel digital power.
ENBKL#	Controls backlight power enable.

2.4.2.1.5 LPC Signals

Signal	Signal Description
LPC_FRAME#	LPC frame indicates the start of an LPC cycle
LPC_AD[0:3]	LPC multiplexed address, command and data bus
LPC_DRQ[0:1]#	LPC serial DMA request
LPC_CLK	LPC clock output - 33MHz nominal
LPC_SERIRQ	LPC serial interrupt

2.4.2.1.6 Miscellaneous Signals

Signal	Signal Description							
SPKR	Output for audio enunciator - the "speaker" in PC-AT systems							
BIOS_DIS0# BIOS_DIS1#	Selection straps to determine the BIOS boot device							
	BIOS_DIS1#	BIOS_DIS0#	Chipset SPI CS1# Destination	Chipset SPI CS0# Destination	Carrier SPI_CS#	SPI Descriptor	Bios Entry	Ref Line
	1	1	Module	Module	High	Module	SPI0/SPI1	0
	1	0	Module	Module	High	Module	Carrier FWH	1
	0	1	Module	Carrier	SPI0	Carrier	SPI0/SPI1	2
	0	0	Carrier	Module	SPI1	Module	SPI0/SPI1	3

2.4.2.1.7 PCI Express Signals

Signal	Signal Description
PCIE_TX[0:6] +/-	PCI Express Differential Transmit Pair 0-6
PCIE_RX[0:6] +/-	PCI Express Differential Receive Pair 0-6
PCIE0_CK_REF+/-	Reference clock output for PCI Express lanes 0-6 and for PCI Express Graphics lanes 0-15

2.4.2.1.8 Power Signals

Signal	Signal Description
VCC_5V_SBY	Standby power input: +5.0V nominal. See Electrical Specifications for allowable input range. If VCC5_SBY is used, all available VCC_5V_SBY pins on the connector(s) must be used. Only used for standby and suspend functions. May be left unconnected if these functions are not used in the system design.
VCC_RTC	Real-time clock circuit-power input. Nominally +3.0V.

2.4.2.1.9 Power & System Management Signals

Signal	Signal Description
SUS_S3#	Indicates system is in Suspend to RAM state. Active low output.
SUS_S4#	Indicates system is in Suspend to Disk state. Active low output.
SUS_S5#	Indicates system is in Soft Off state.
BATLOW#	Indicates that external battery is low
PWRBTN#	Power button to bring system out of S5 (soft off), active on rising edge.
SMB_CK	System Management Bus bidirectional clock line.
SMB_DTA	System Management Bus bidirectional data line.
SMB_ALERT#	System Management Bus Alert - input can be used to generate an SMI# (System Management Interrupt) or to wake the system.
SUS_STAT#	Indicates imminent suspend operation.
PWR_OK	Power OK from main power supply
SYS_RESET#	Reset button input. Active low input.
WAKE0#	PCI Express wake up signal.
WAKE1#	General purpose wake up signal.

2.4.2.1.10 SATA Signals

Signal	Signal Description
SATA[0:3]_TX +/-	Serial ATA Channel 0-3 transmit differential pair.
SATA[0:3]_RX +/-	Serial ATA Channel 0-3 receive differential pair.
ATA_ACT#	ATA (parallel and serial) activity indicator, active low.

2.4.2.1.11 VGA Signals



Signal	Signal Description
VGA_RED	Red for monitor. Analog DAC output.
VGA_GRN	Green for monitor. Analog DAC output.
VGA_BLU	Blue for monitor. Analog DAC output.
VGA_HSYNC	Horizontal sync output to VGA monitor
VGA_VSYNC	Vertical sync output to VGA monitor
VGA_I ² C_CLK	DDC clock line (I2C port dedicated to identify VGA monitor capabilities)
VGA_I ² C_DAT	DDC data line.

2.4.2.1.12 USB Signals

Signal	Signal Description
USB[0:7] +/-	USB differential pairs, channels 0 through 7
USB_0_1_OC#	USB over-current sense, USB channels 0 and 1
USB_2_3_OC#	USB over-current sense, USB channels 2 and 3
USB_4_5_OC#	USB over-current sense, USB channels 4 and 5
USB_6_7_OC#	USB over-current sense, USB channels 6 and 7



ESM-QM87

2.4.3 COM Express Connector 2 (CN1B)

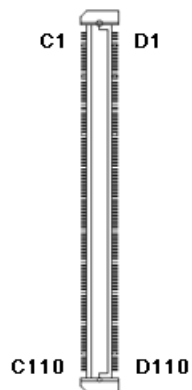
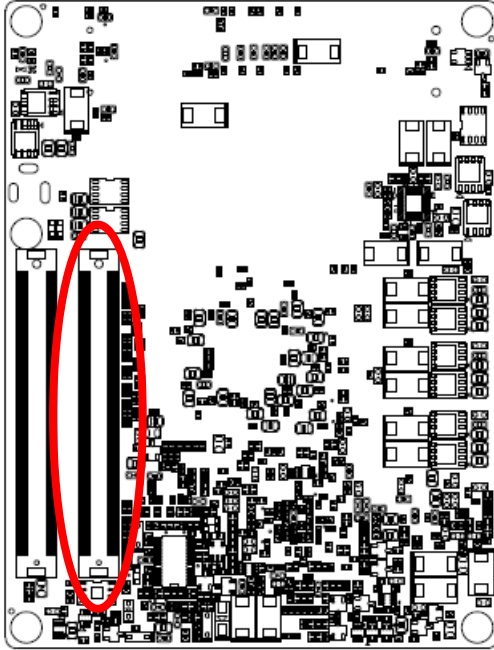


Signal	PIN	PIN	Signal
GND	C1	D1	GND
GND	C2	D2	GND
USB_SSRX0-	C3	D3	USB_SSTX0-
USB_SSRX0+	C4	D4	USB_SSTX0+
GND	C5	D5	GND
USB_SSRX1-	C6	D6	USB_SSTX1-
USB_SSRX1+	C7	D7	USB_SSTX1+
GND	C8	D8	GND
USB_SSRX2-	C9	D9	USB_SSTX2-
USB_SSRX2+	C10	D10	USB_SSTX2+
GND	C11	D11	GND
USB_SSRX3-	C12	D12	USB_SSTX3-
USB_SSRX3+	C13	D13	USB_SSTX3+
GND	C14	D14	GND
NC	C15	D15	DDI1_CTRLCLK_AUX+
NC	C16	D16	DDI1_CTRLDATA_AUX-
RSVD5	C17	D17	NC
RSVD6	C18	D18	NC
PCIE_RX6+	C19	D19	PCIE_TX6+
PCIE_RX6-	C20	D20	PCIE_TX6-
GND	C21	D21	GND
NC	C22	D22	NC
NC	C23	D23	NC
DDI1_HPD	C24	D24	NC
NC	C25	D25	NC
NC	C26	D26	DDI1_PAIR0+
NC	C27	D27	DDI1_PAIR0-
NC	C28	D28	NC
NC	C29	D29	DDI1_PAIR1+
NC	C30	D30	DDI1_PAIR1-



Quick Installation Guide

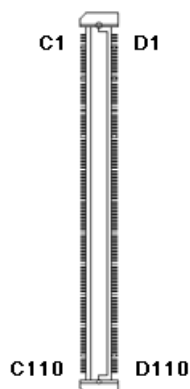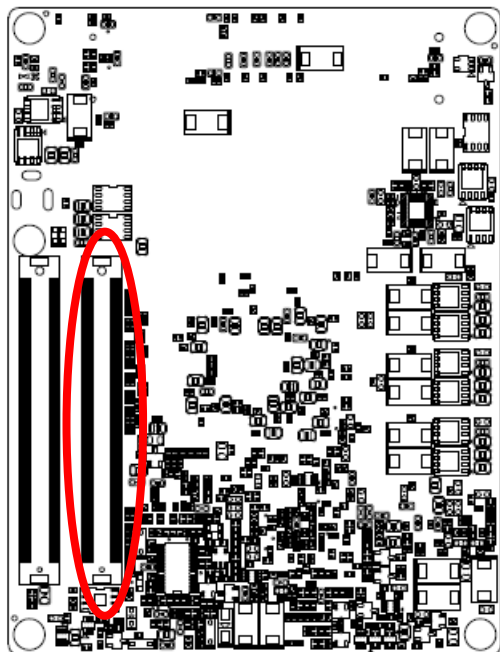

Signal	PIN	PIN	Signal
GND	C31	D31	GND
DDI2_CTRLCLK_AUX+	C32	D32	DDI1_PAIR2+
DDI2_CTRLCLK_AUX-	C33	D33	DDI1_PAIR2-
DDI2_DDC_AUX_SEL	C34	D34	DDI1_DDC_AUX_SEL
NC	C35	D35	NC
DDI3_CTRLCLK_AUX+	C36	D36	DDI1_PAIR3+
DDI3_CTRLCLK_AUX-	C37	D37	DDI1_PAIR3-
DDI3_DDC_AUX_SEL	C38	D38	NC
DDI3_PAIR0+	C39	D39	DDI2_PAIR0+
DDI3_PAIR0-	C40	D40	DDI2_PAIR0-
GND	C41	D41	GND
DDI3_PAIR1+	C42	D42	DDI2_PAIR1+
DDI3_PAIR1-	C43	D43	DDI2_PAIR1-
DDI3_HPD	C44	D44	DDI2_HPD
NC	C45	D45	NC
DDI3_PAIR2+	C46	D46	DDI2_PAIR2+
DDI3_PAIR2-	C47	D47	DDI2_PAIR2-
NC	C48	D48	NC
DDI3_PAIR3+	C49	D49	DDI2_PAIR3+
DDI3_PAIR3-	C50	D50	DDI2_PAIR3-
GND	C51	D51	GND
PEG_RX0+	C52	D52	PEG_TX0+
PEG_RX0-	C53	D53	PEG_TX0-
TYPE0#	C54	D54	PEG_LANE_RV#
PEG_RX1+	C55	D55	PEG_TX1+
PEG_RX1-	C56	D56	PEG_TX1-
TYPE1#	C57	D57	TYPE2#
PEG_RX2+	C58	D58	PEG_TX2+
PEG_RX2-	C59	D59	PEG_TX2-
GND	C60	D60	GND

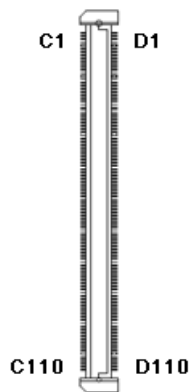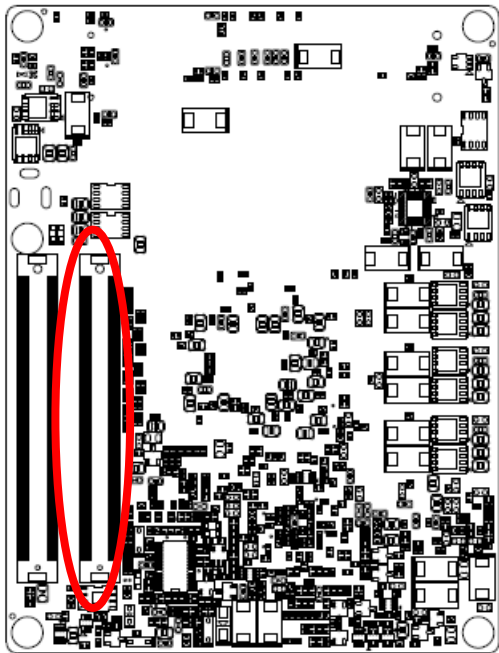

Signal	PIN	PIN	Signal
PEG_RX3+	C61	D61	PEG_TX3+
PEG_RX3-	C62	D62	PEG_TX3-
NC	C63	D63	NC
NC	C64	D64	NC-
PEG_RX4+	C65	D65	PEG_TX4+
PEG_RX4-	C66	D66	PEG_TX4-
NC	C67	D67	GND
PEG_RX5+	C68	D68	PEG_TX5+
PEG_RX5-	C69	D69	PEG_TX5-
GND	C70	D70	GND
PEG_RX6+	C71	D71	PEG_TX6+
PEG_RX6-	C72	D72	PEG_TX6-
GND	C73	D73	GND
PEG_RX7+	C74	D74	PEG_TX7+
PEG_RX7-	C75	D75	PEG_TX7-
GND	C76	D76	GND
NC	C77	D77	NC
PEG_RX8+	C78	D78	PEG_TX8+
PEG_RX8-	C79	D79	PEG_TX8-
GND	C80	D80	GND
PEG_RX9+	C81	D81	PEG_TX9+
PEG_RX9-	C82	D82	PEG_TX9-
NC	C83	D83	NC
GND	C84	D84	GND
PEG_RX10+	C85	D85	PEG_TX10+
PEG_RX10-	C86	D86	PEG_TX10-
GND	C87	D87	GND
PEG_RX11+	C88	D88	PEG_TX11+
PEG_RX11-	C89	D89	PEG_TX11-
GND	C90	D90	GND

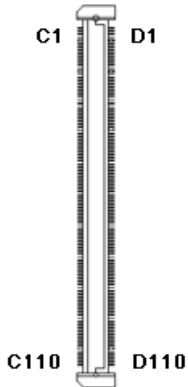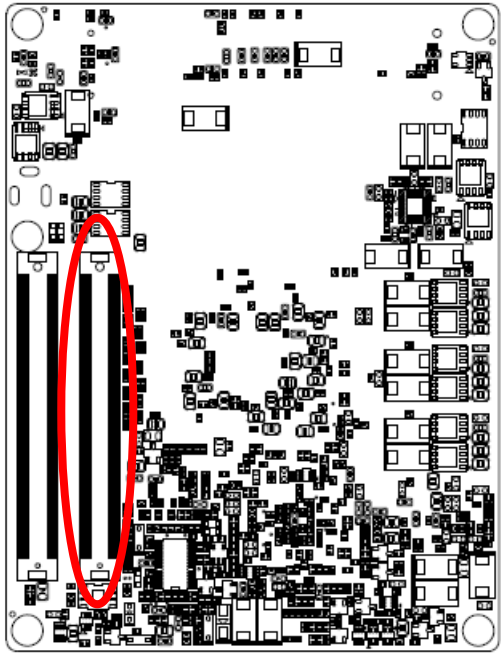

Signal	PIN	PIN	Signal
PEG_RX12+	C91	D91	PEG_TX12+
PEG_RX12-	C92	D92	PEG_TX12-
GND	C93	D93	GND
PEG_RX13+	C94	D94	PEG_TX13+
PEG_RX13-	C95	D95	PEG_TX13-
GND	C96	D96	GND
NC	C97	D97	NC
PEG_RX14+	C98	D98	PEG_TX14+
PEG_RX14-	C99	D99	PEG_TX14-
GND	C100	D100	GND
PEG_RX15+	C101	D101	PEG_TX15+
PEG_RX15-	C102	D102	PEG_TX15-
GND	C103	D103	GND
VCC	C104	D104	VCC
VCC	C105	D105	VCC
VCC	C106	D106	VCC
VCC	C107	D107	VCC
VCC	C108	D108	VCC
VCC	C109	D109	VCC
GND	C110	D110	GND

ESM-QM87

2.4.3.1 Signal Description – COM Express Connector 2 (CN1B)

2.4.3.1.1 USB3.0 Signals

Signal	Signal Description
USB_SSTX[0:3]+ USB_SSTX[0:3]-	Additional transmit signal differential pairs for the SuperSpeed USB data path.
USB_SSRX[0:3]+ USB_SSRX[0:3]-	Additional receive signal differential pairs for the SuperSpeed USB data path.

2.4.3.1.2 PEG Signals

Signal	Signal Description
PEG_TX[0:15]+ PEG_TX[0:15]-	PCI Express Graphics transmit differential paris.
PEG_RX[0:15]+ PEG_RX[0:15]-	PCI Express Graphics recevie differential paris.
PEG_LANE_RV#	PCI Express Graphics lane reversal input strap. Pull low on the Carrier board to reverse lane order.

2.4.3.1.3 DDI Signals

Signal	Signal Description
DDI[1:3]_PAIR[0:3]+ DDI[1:3]_PAIR [0:3]-	Digital Display Interface 1 to 3 Pair[0:3] differential pairs
DDI[1:3]_DDC_AUX_SEL	Selects the function of DDI[1:3]_CTRLCLK_AUX+ and DDI[1:3]_CTRLDATA_AUX-. If this input is floating the AUX pair is used for the DP AUX+/- signals. If pulled-high the AUX pair contains the CRTCLK and CTRLDATA signals.
DDI[1:3]_CTRLCLK_AUX+	DP AUX+function if DDI[1:3]_DDC_AUX_SEL is no connect HDMI/DVI 12C CTRLCLK if DDI[1:3]_DDC_AUX_SEL is pulled high
DDI[1:3]_CTRLDATA_AUX-	DP AUX-function if DDI[1:3]_DDC_AUX_SEL is no connect HDMI/DVI 12C CTRLDATA if DDI[1:3]_DDC_AUX_SEL is pulled high
DDI[1:3]_HPD	Digital Display Interface Hot-Plug Detect

2.5 ESD/EMI solutions



Notification:

There are some ESD/EMI solutions that users have to consider before designing your own Thermal solutions or Carrier board

Thermal solution:



- Except CPU and Chipset contact area (Red Square), keep blue shade surface 5.45mm away from surface of ESM-QM87.

Please refer to the pictures shown as below

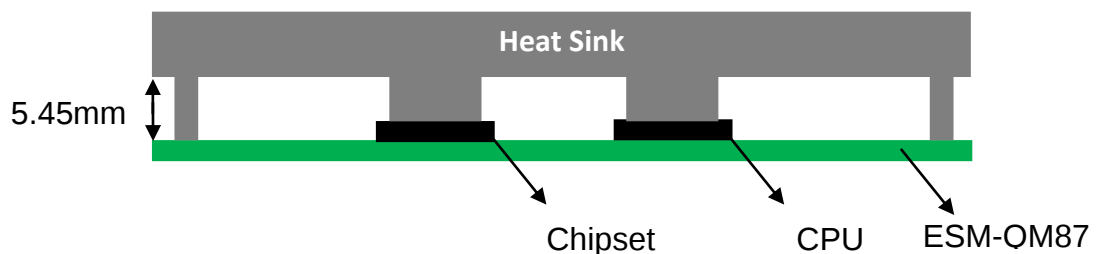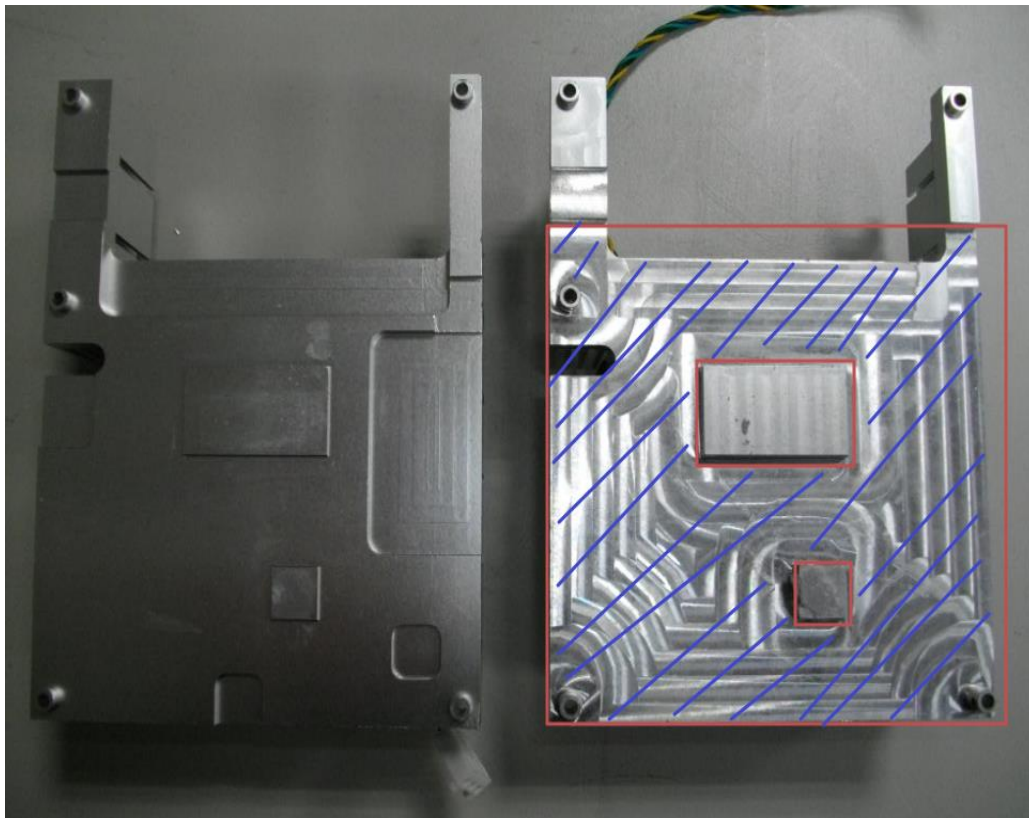

ESM-QM87

- Make sure IO of your carrier board is grounding with chassis. You can implement conductive tape or EMI gasket.

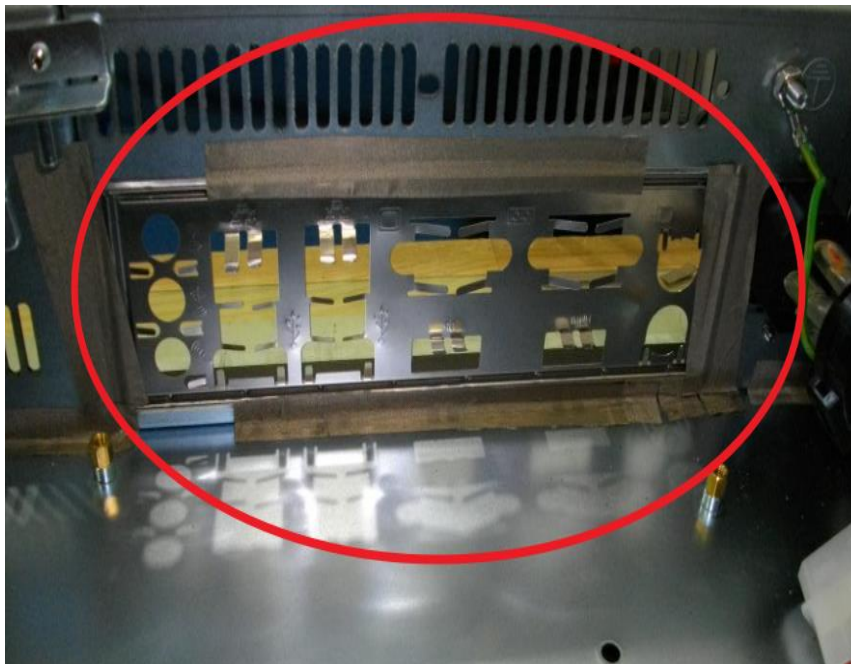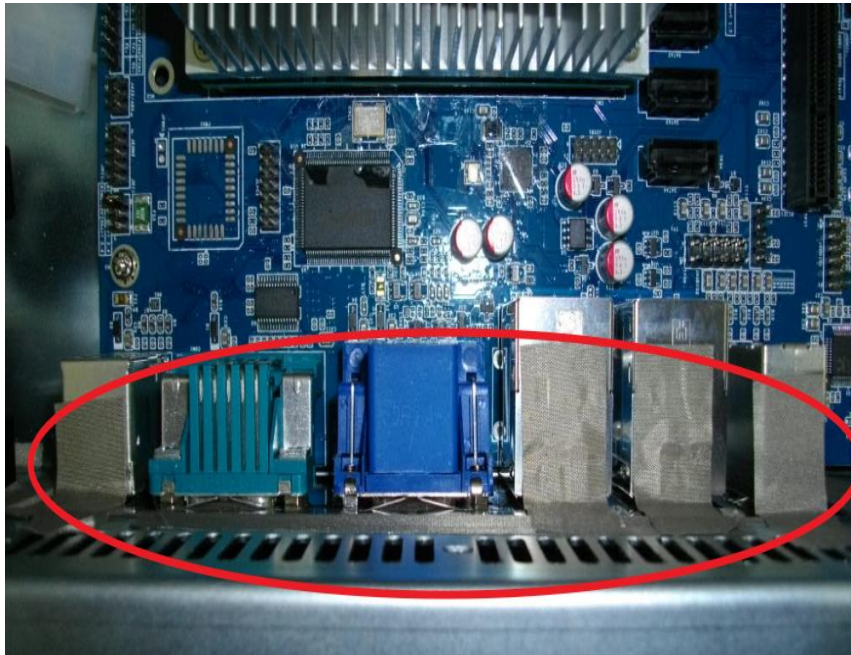


Quick Installation Guide

- Make sure Hard disk is grounding with metal chassis. You can use conductive tape, metal bracket, or EMI gasket.



- Make sure trimming wires well; if it is not necessary please do not let your wire across the carrier board.

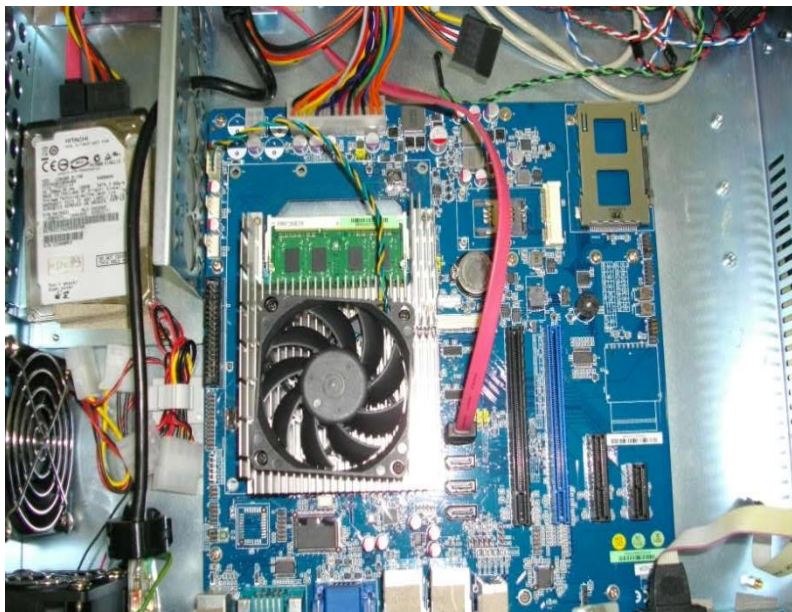

3.BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing or <F2> immediately after switching the system on, or

By pressing the or <F2> key when the following message appears briefly at the bottom of the screen during the POST (Power On Self Test).

Press or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. Remove all storage can also enter the BIOS Setup Utility.

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PGUP/HOME key	Go to Top of Screen
PGDN/END key	Go to Bottom of Screen
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values.
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Windows press <Esc> or <Enter> key.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.


3.6 BIOS setup

Once you enter the Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

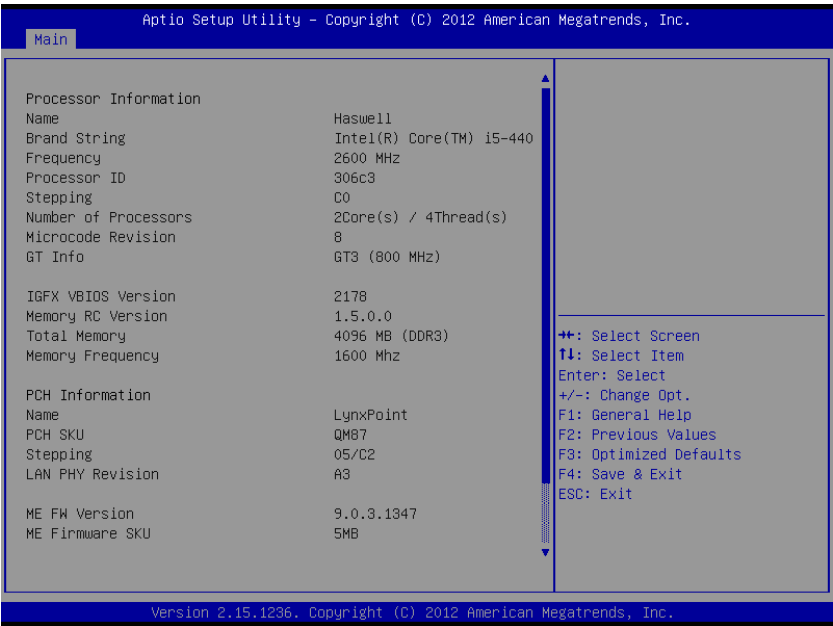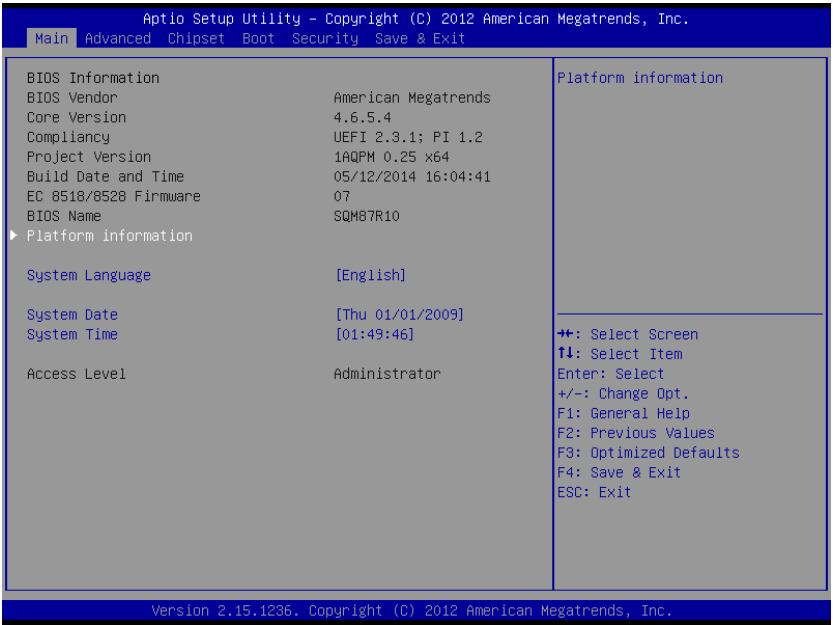

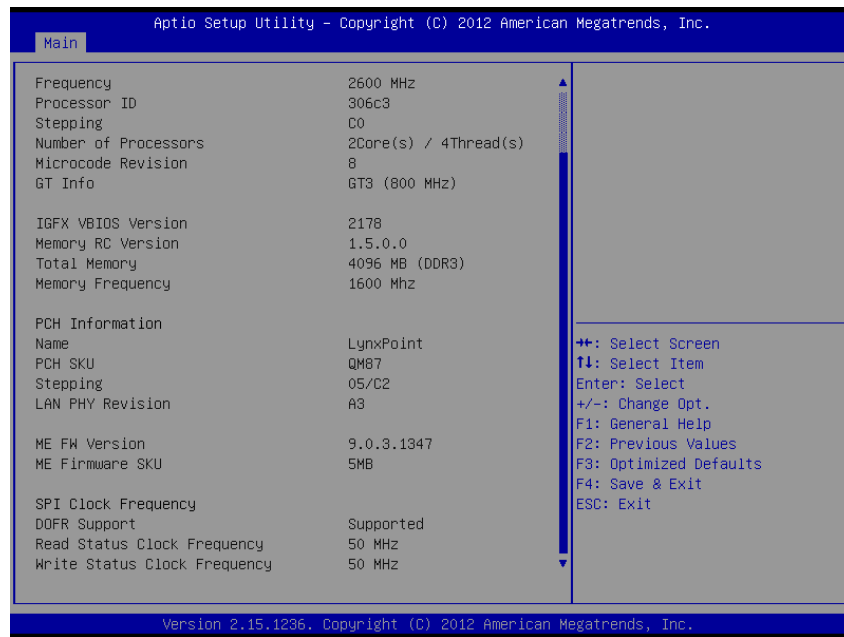

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com.tw) to download the latest product and BIOS information.


ESM-QM87

3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

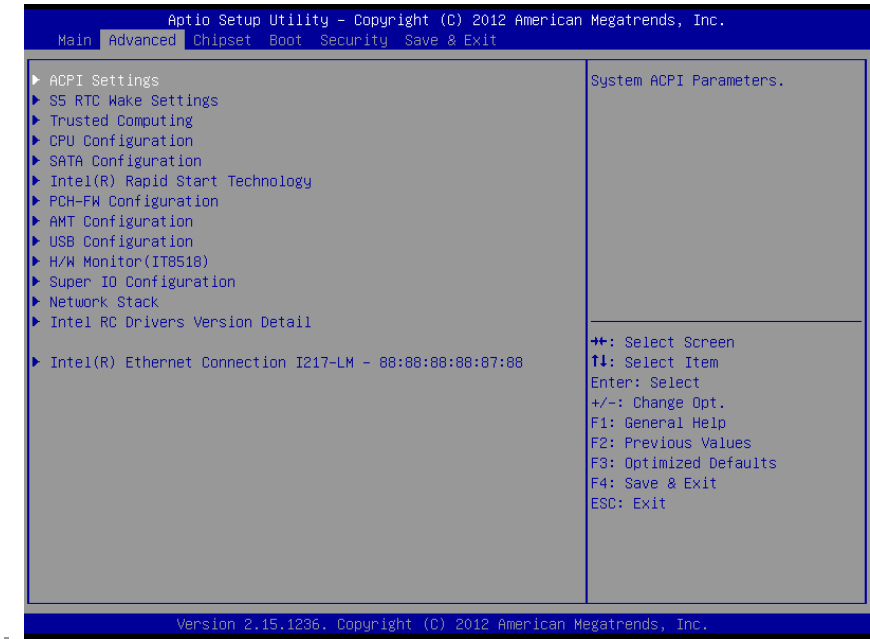

3.6.2.1 APCI Settings

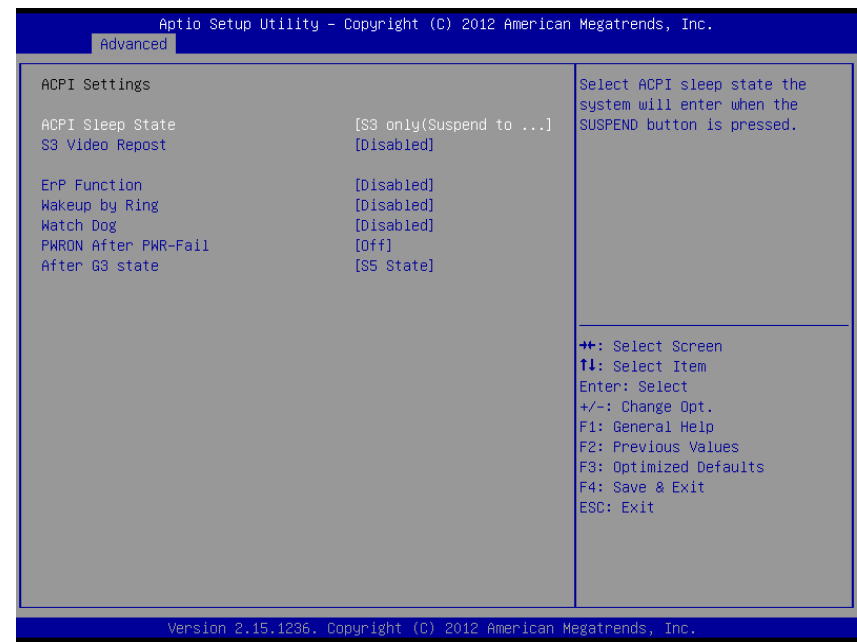

Item	Options	Description
APCI Sleep State	Suspend Disabled S3 only(Suspend to RAM)[Default]	Select ACPI sleep state the system will enter when the SUSPEND button is pressed.
S3 Video Repost	Disabled[Default] Enabled	Enable or Disable S3 Video Repost.
ErP Function	Disabled[Default]	Enable or Disable ErP.

Quick Installation Guide

	Enabled	
Wakeup by Ring	Disabled[Default] Enabled	Wakeup by Ring from S1~S5. On EV-EX14 carrier board, if you wanna enable LPC_PME function (such like the PS/2 Keyboard/Mouse wake from S1) please enable it.
Watch Dog	Disabled[Default] 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
PWRON After PWR-Fail	Off[Default] On Former-Sts	Select PWRON After PWR-Fail.
After G3 state	S5 State[Default] S0 State	System will return to S0 or S5 state after G3.


3.6.2.2 S5 RTC Wake Settings



Item	Option	Description
Wake system with Fixed Time	Disabled[Default] Enabled	Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified.


ESM-QM87

3.6.2.2.1 Wake system with Fixed Time

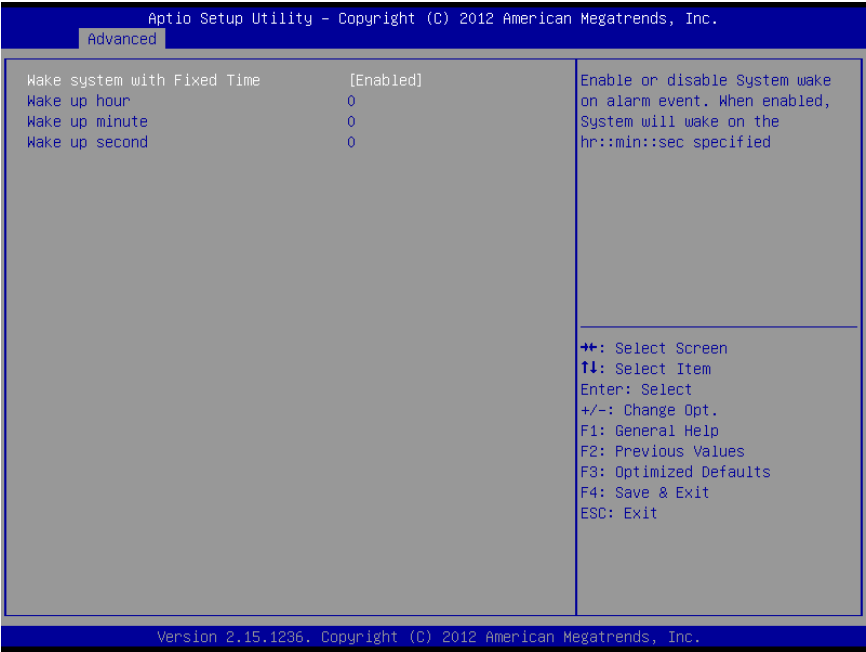

Item	Options	Description
Wake up hour	0-23	Select 0-23 For example enter 3 for 3am and 15 for 3pm.
Wake up minute	0-59	Select 0-59 For example enter 3 for 3am and 15 for 3pm.
Wake up second	0-59	Select 0-59 For example enter 3 for 3am and 15 for 3pm.



3.6.2.3 Trusted Computing

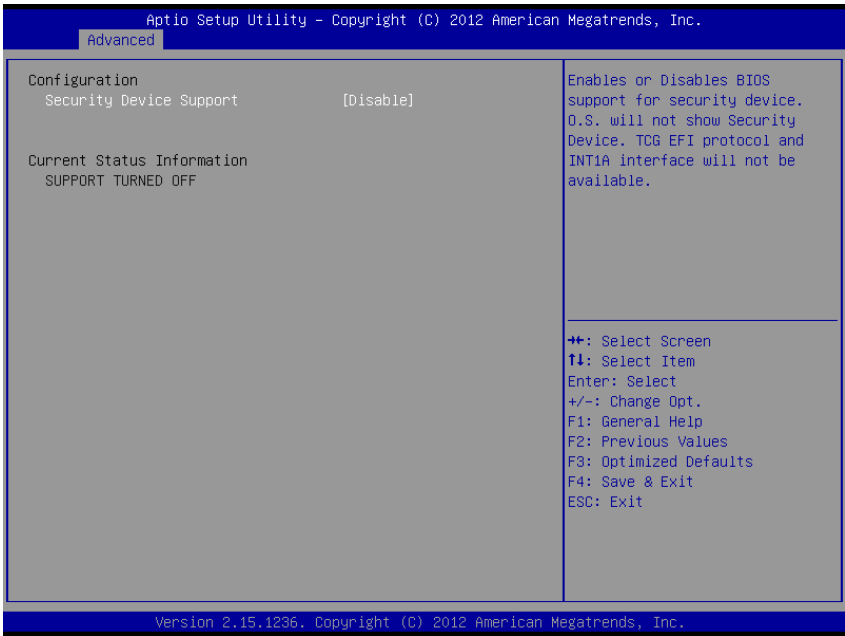

Item	Options	Description
Security Device Support	Disabled[Default], Enabled	Enables or Disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.6.2.4 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

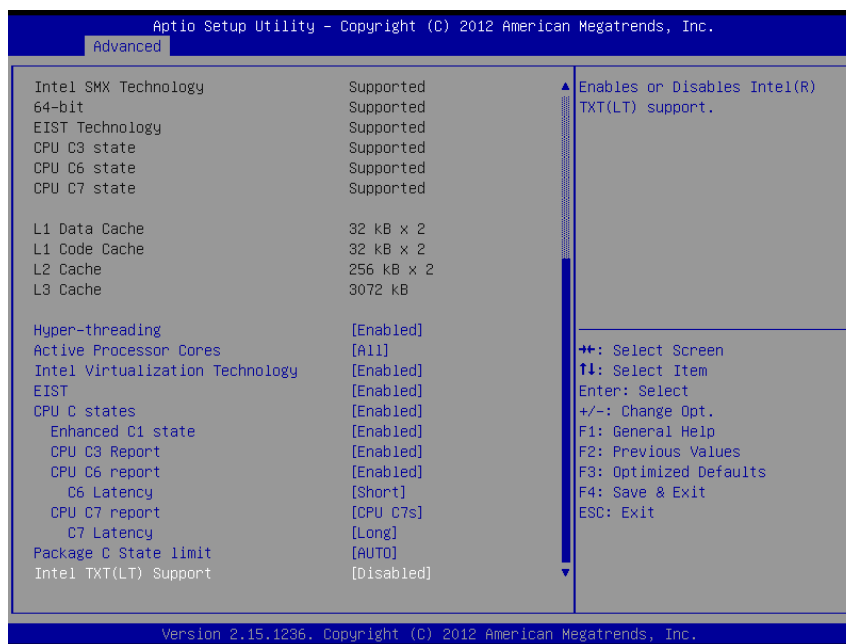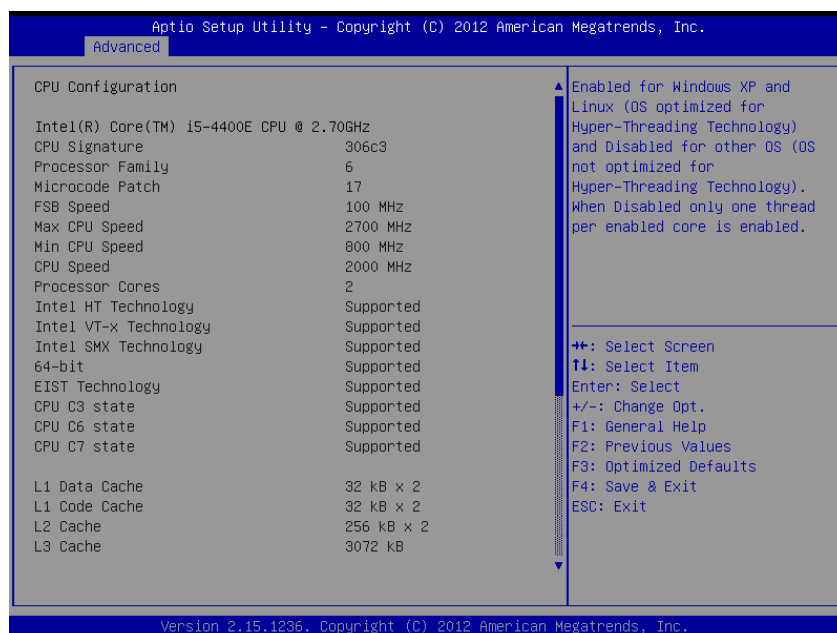


Item	Options	Description
Hyper-threading	Disabled Enabled[Default]	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Active Processor Cores	All[Default]	Number of cores to enable in each processor

ESM-QM87

	1/2/3	package
Intel Virtualization Technology	Disabled Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
EIST	Disabled Enabled[Default]	Enable/Disable Intel SpeedStep.
CPU C states	Disabled Enabled[Default]	Enable or disable CPU C states.
Enhanced C1 state	Disabled Enabled[Default]	Enhanced C1 state.
CPU C3/6 Report	Disabled Enabled[Default]	Enable/Disable CPU C3/6 report to OS.
C6 Latency	Short[Default] Long	Configure Short/Long latency for C6.
CPU C7 Report	Disabled CPU C7 CPU C7s[Default]	Enable/Disable CPU C7 report to OS.
C7 Latency	Short Long[Default]	Configure Short/Long latency for C7.
Package C State limit	C0/C1 C2 C3 C6 C7 C7s AUTO[Default]	Package C State limit.
Intel TXT(LT) Support	Disabled[Default] Enabled	Enables or Disables Intel® TXT(LT) support.


3.6.2.5 SATA Configuration

It allows you to select the operation mode for SATA controller.

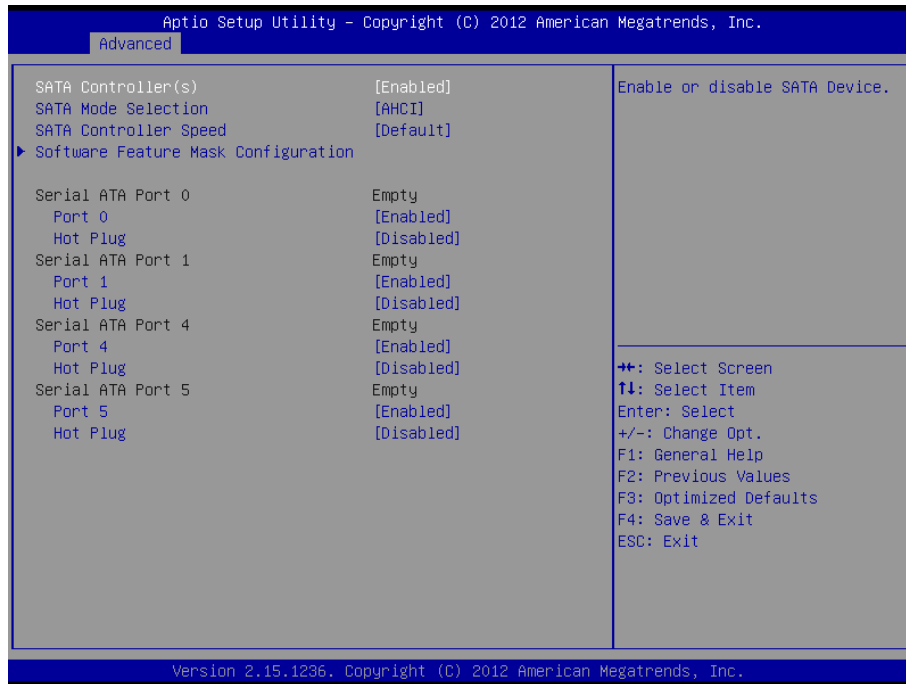

Item	Options	Description
SATA Controller(s)	Enabled[Default] Disabled	Enable or disable SATA Device.
SATA Mode Selection	IDE AHCI[Default] RAID	Determines how SATA controller(s) operate.
SATA Controller Speed	Default[Default] Gen1 Gen2 Gen3	Indicates the maximum speed the SATA controller can support.

3.6.2.5.1 Software Feature Mask Configuration

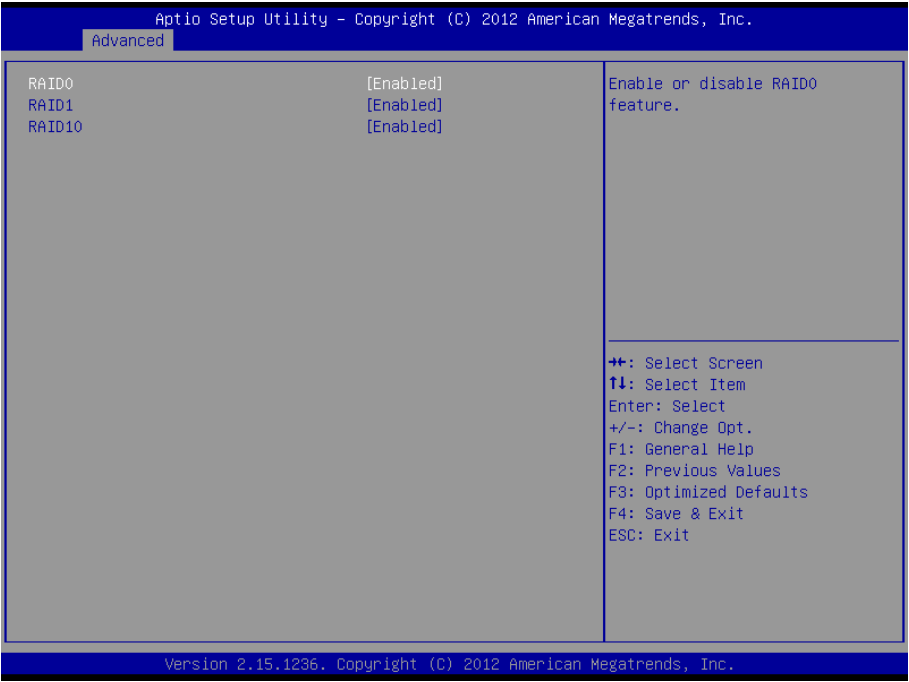


Item	Options	Description
RAID0	Disabled Enabled[Default]	Enable or disable RAID0 feature.
RAID1	Disabled Enabled[Default]	Enable or disable RAID1 feature.
RAID10	Disabled Enabled[Default]	Enable or disable RAID10 feature

3.6.2.6 Intel® Rapid Start Technology



Item	Options	Description
Intel® Rapid Start Technology	Enabled Disabled[Default]	Enable or disable Intel® Rapid Start Technology.

3.6.2.7 PCH-FW Configuration

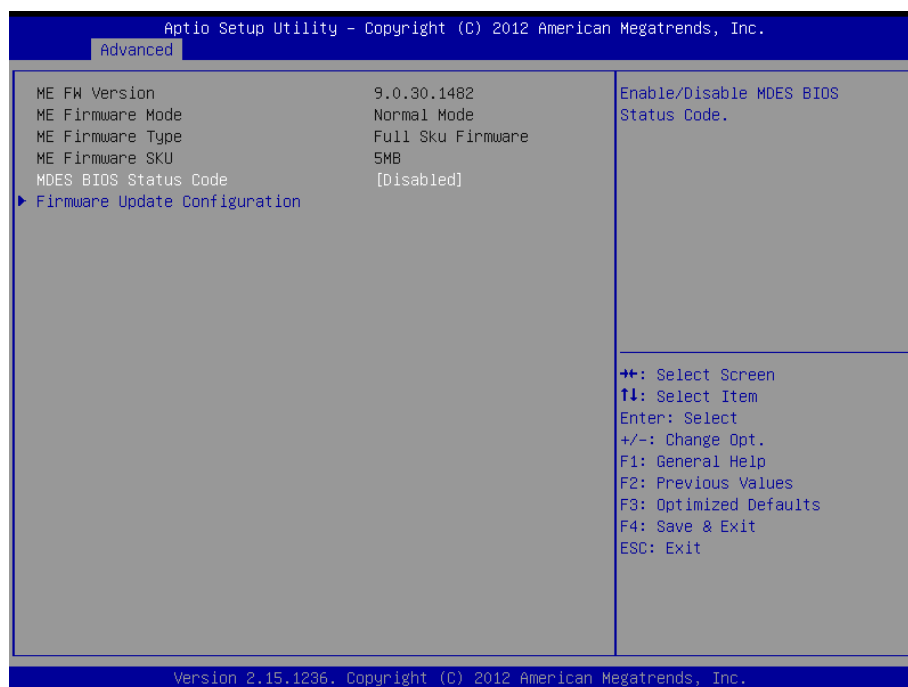

Item	Options	Description
MDES BIOS Status Code	Disabled[Default] Enabled	Enable/Disable MDES BIOS Status Code.


3.6.2.7.1 Firmware Update Configuration



Item	Options	Description
Me FW Image Re-Flash	Disabled [Default] Enabled	Enable/Disable Me FW Image Re-Flash function.

3.6.2.8 AMT Configuration


Intel AMT allows hardware-based remote management, security, power-management, and remote-configuration features.

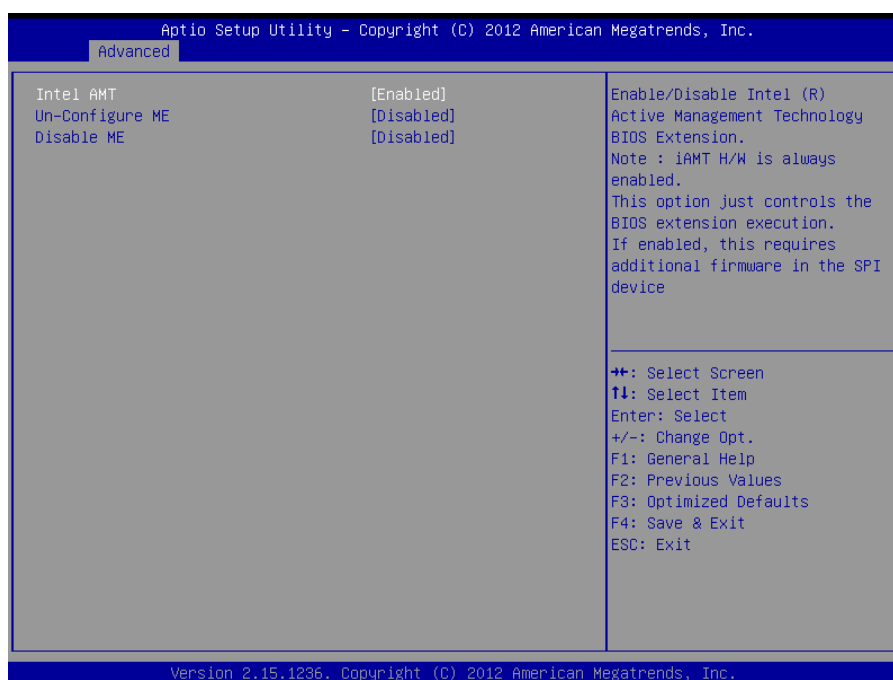

Item	Options	Description
Intel AMT	Enabled[Default] Disabled	Enable/Disable Intel ® Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device
Un-Configure ME	Enabled Disabled[Default]	OEMFLag Bit 15: Un-Configure ME without password
Disable ME	Enabled Disabled[Default]	Set ME to Soft Temporary Disabled.


3.6.2.9 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

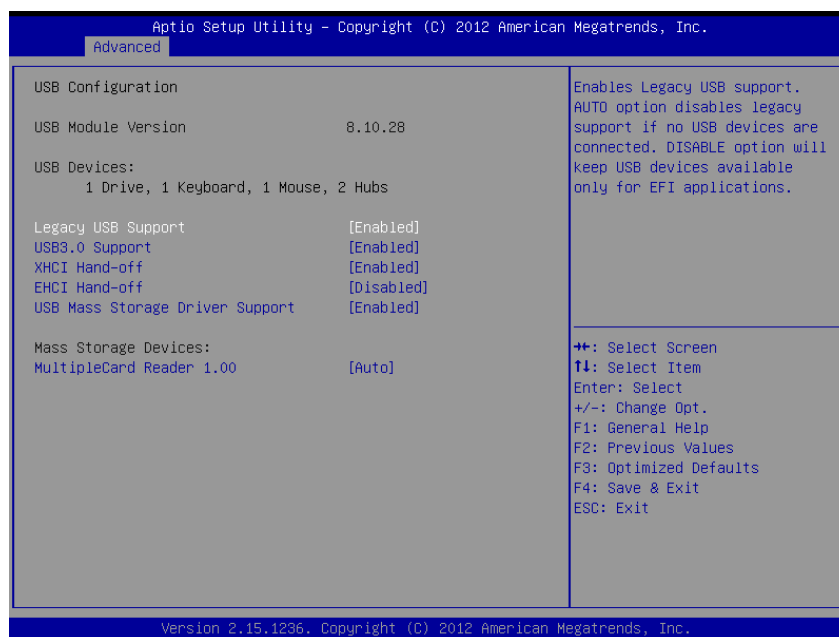

Item	Options	Description
Legacy USB Support	Enabled[Default] Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
USB3.0 Support	Enabled[Default] Disabled	Enable/Disable USB3.0 (XHCI) Controller support.
XHCI Hand-off	Enabled[Default] Disabled	This is a workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
EHCI Hand-off	Enabled Disabled[Default]	This is a workaround for OSES without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.
USB Mass Storage Driver Support	Enabled[Default] Disabled	Enable/Disable USB Mass Storage Driver Support.
Mass Storage Devices	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.	


3.6.2.10 H/W Monitor (IT8518)

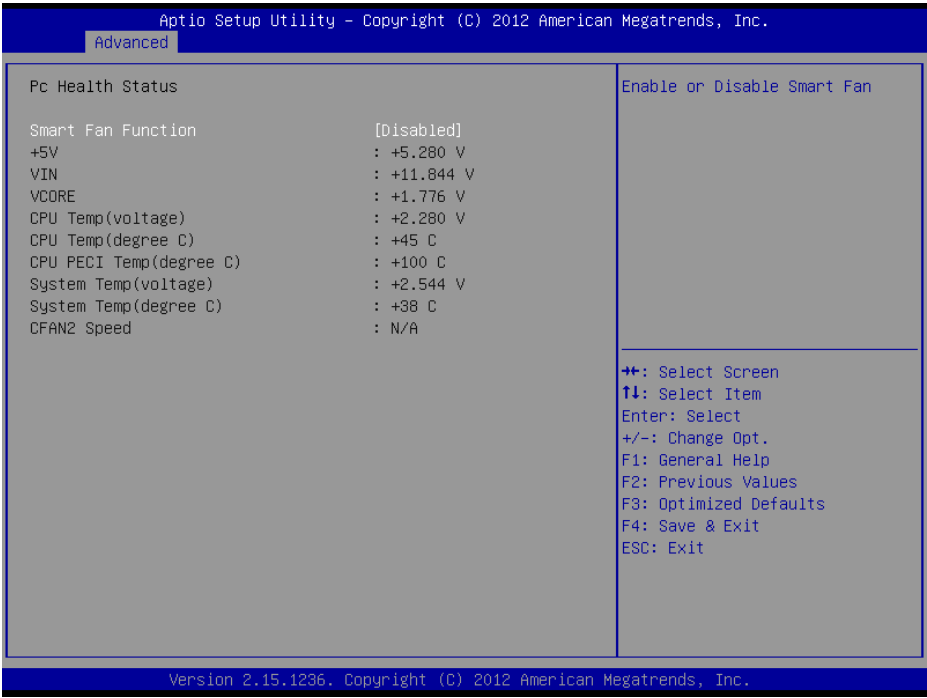

Item	Options	Description
Smart Fan Function	Enabled Disabled[Default]	Enable or Disable Smart Fan.
Smart Fan Mode Configuration	Smart Fan Mode Select.	


3.6.2.11 Super IO Configuration

You can use this item to set up or change the Super IO configuration for serial ports.

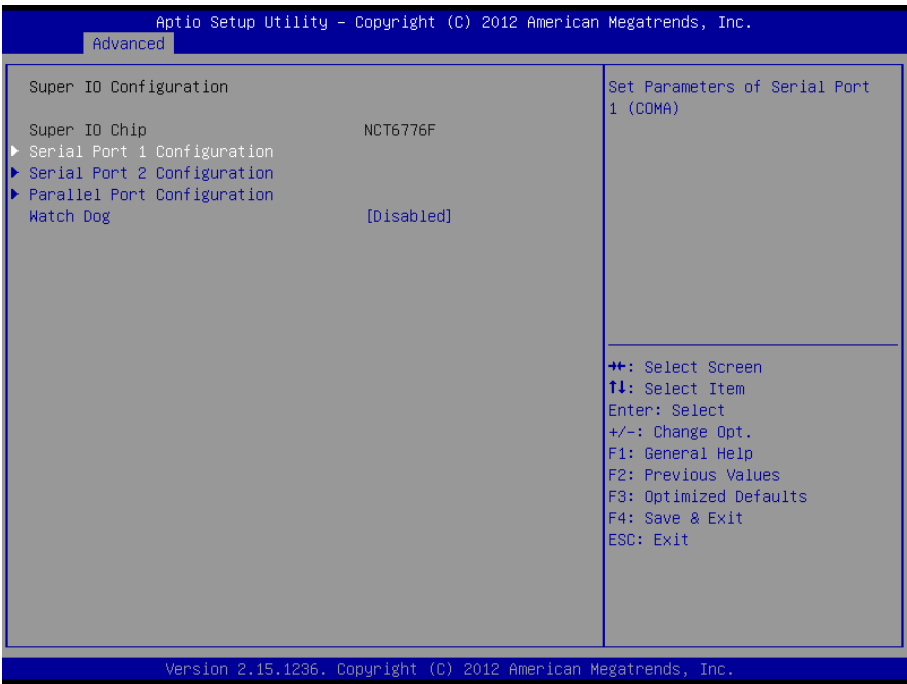


Item	Options	Description
Serial Port 1 Configuration	Enabled[Default] Disabled	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Enabled[Default] Disabled	Set Parameters of Serial Port 2 (COMB).
Parallel Port Configuration	Enabled[Default] Disabled	Set Parameters of Parallel Port (LPT/LPTE).
Watch Dog	Disabled[Default] 30 Sec 40 Sec 50 Sec 60 Sec 2 Min 10 Min 30 Min	Set SIO watch dog timer.

3.6.2.11.1 Serial Port 1 Configuration

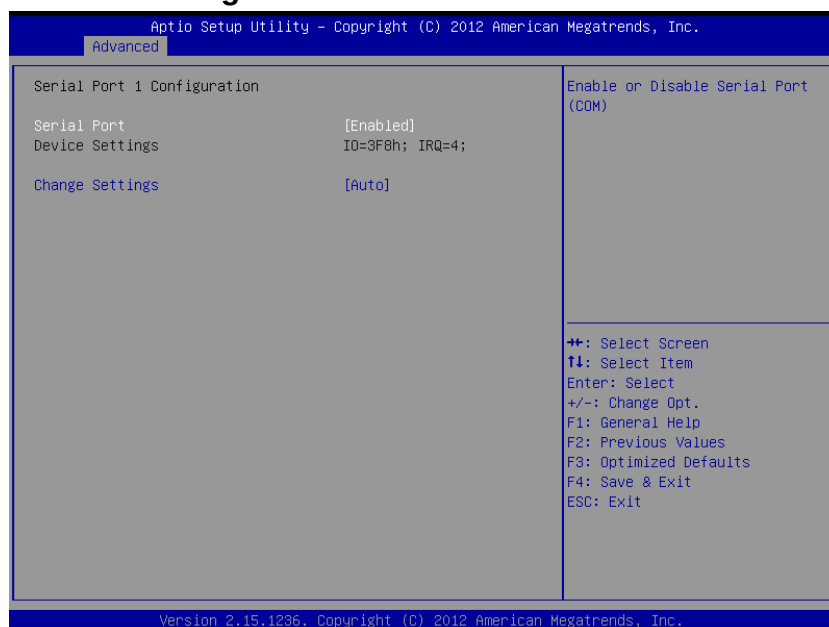


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default] IO=3F8h; IRQ=4, IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12	Select an optimal setting for Super IO device.

3.6.2.11.2 Serial Port 2 Configuration

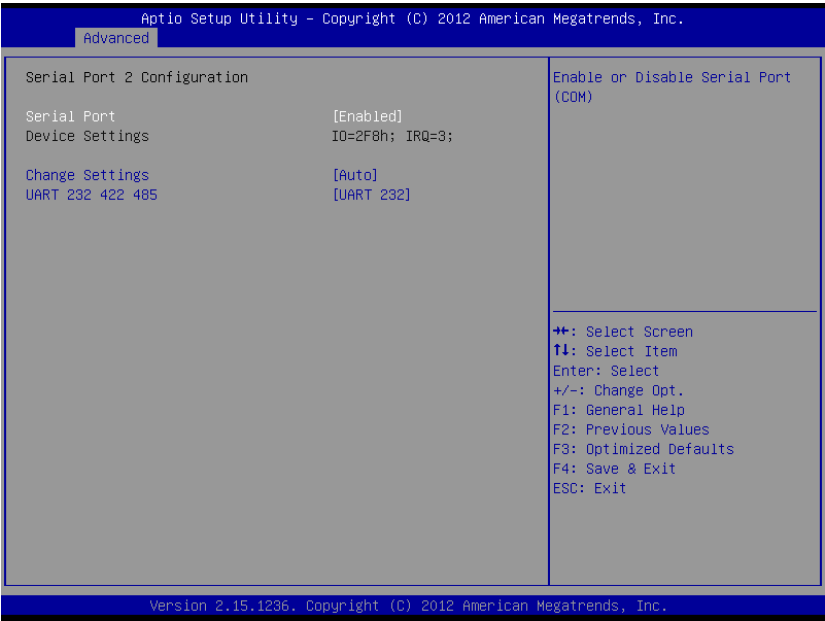

Item	Option	Description
Serial Port	Enabled[Default] Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default] IO=2F8h; IRQ=3 IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12	Select an optimal setting for Super IO device.
UART 232 422 485	UART 232[Default], UART 422, UART485	Change the Serial Port as RS232/422/485.



3.6.2.11.3 Parallel Port Configuration

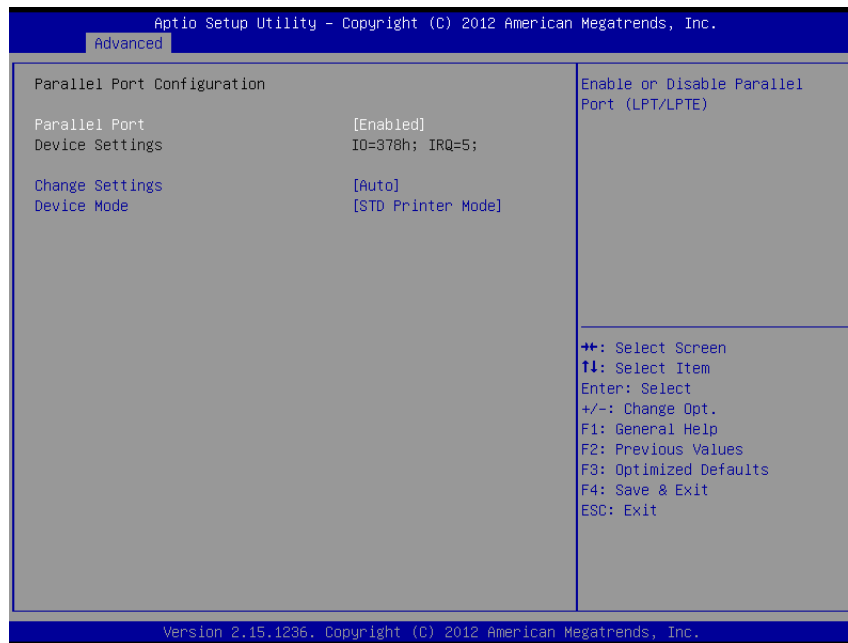

Item	Option	Description
Parallel Port	Enabled[Default] Disabled	Enable or Disable Parallel Port (LPT/LPTE).
Change Settings	Auto[Default] IO=378h; IRQ=5 IO=378h; IRQ=5,6,7,9,10,11,12 IO=278h; IRQ=5,6,7,9,10,11,12 Or Auto[Default] IO=378h; IRQ=5; DMA=3 IO=378h; IRQ=5,6,7,9,10,11,12; DMA=1,3; IO=278h; IRQ=5,6,7,9,10,11,12; DMA=1,3;	Select an optimal setting for Super IO device.
Device Mode	STD Printer Mode[Default] SPP Mode EPP-1.9 and SPP Mode EPP-1.7 and SPP Mode ECP Mode ECP and EPP 1.9 Mode ECP and EPP 1.7 Mode	Change the Printer Port mode.


ESM-QM87

3.6.2.12 Network Stack

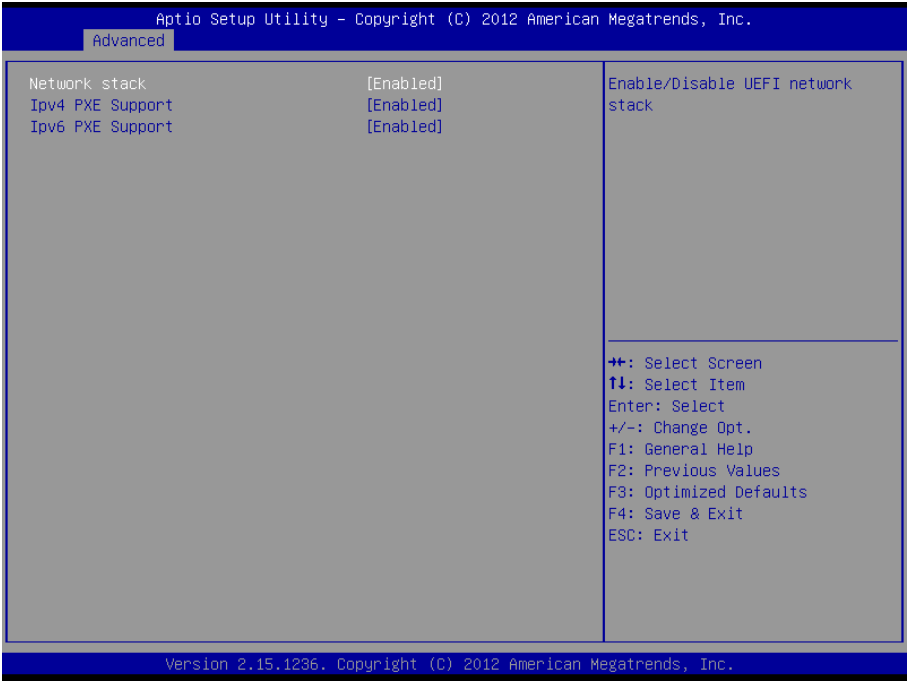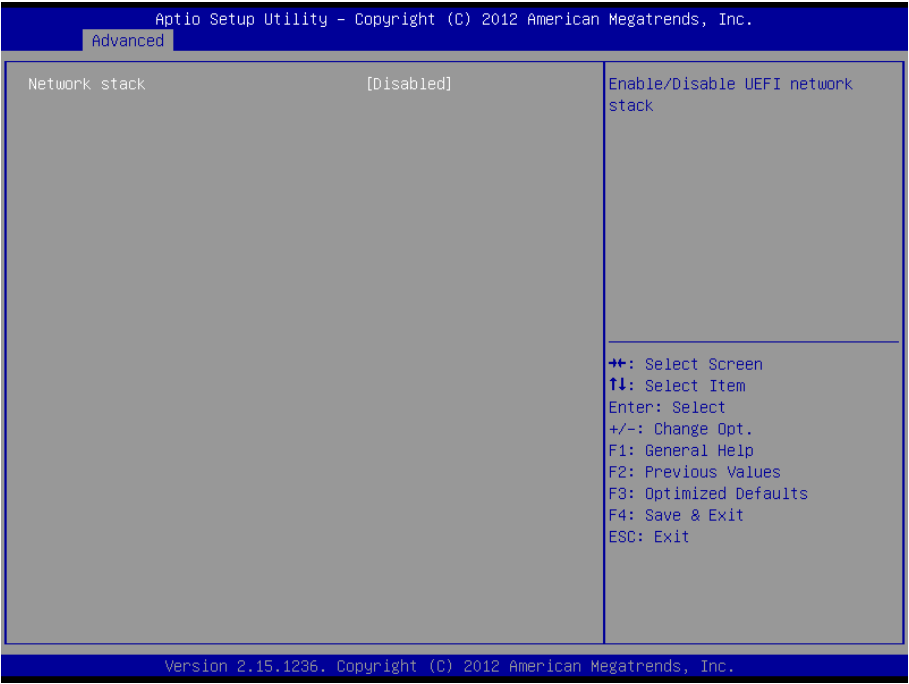


Item	Options	Description
Network stack	Enabled Disabled [Default]	Enable/Disable UEFI network stack.
Ipv4 PXE Support	Enabled Disabled [Default]	Enable Ipv4 PXE Boot Support. If disabled IPV4 PXE boot option will not be created.
Ipv6 PXE Support	Enabled Disabled [Default]	Enable Ipv6 PXE Boot Support. If disabled IPV4 PXE boot option will not be created.


3.6.2.13 Intel RC Drivers Version Detail

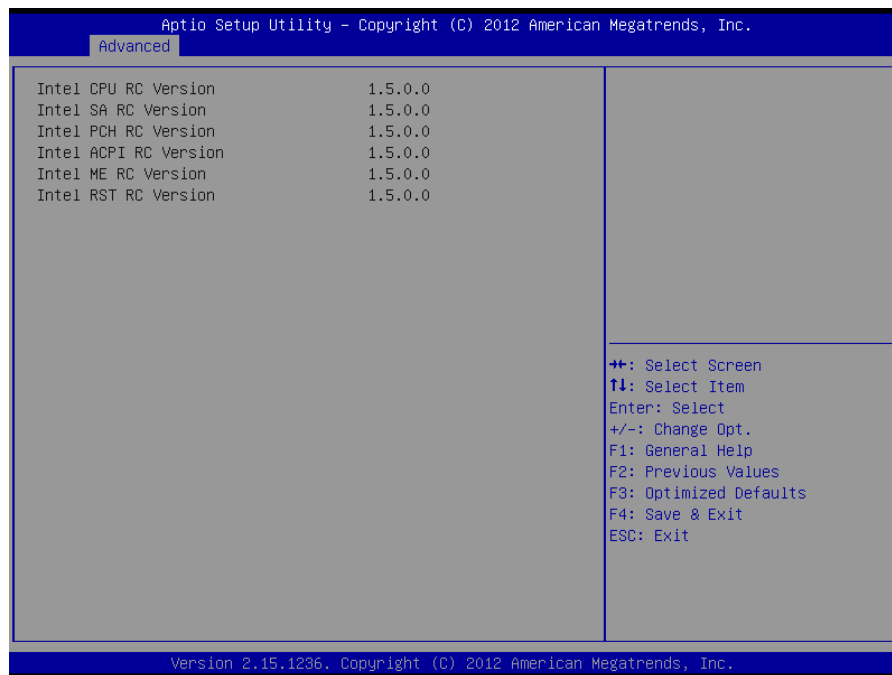

3.6.2.14 Intel Ethernet Connection I217-LM

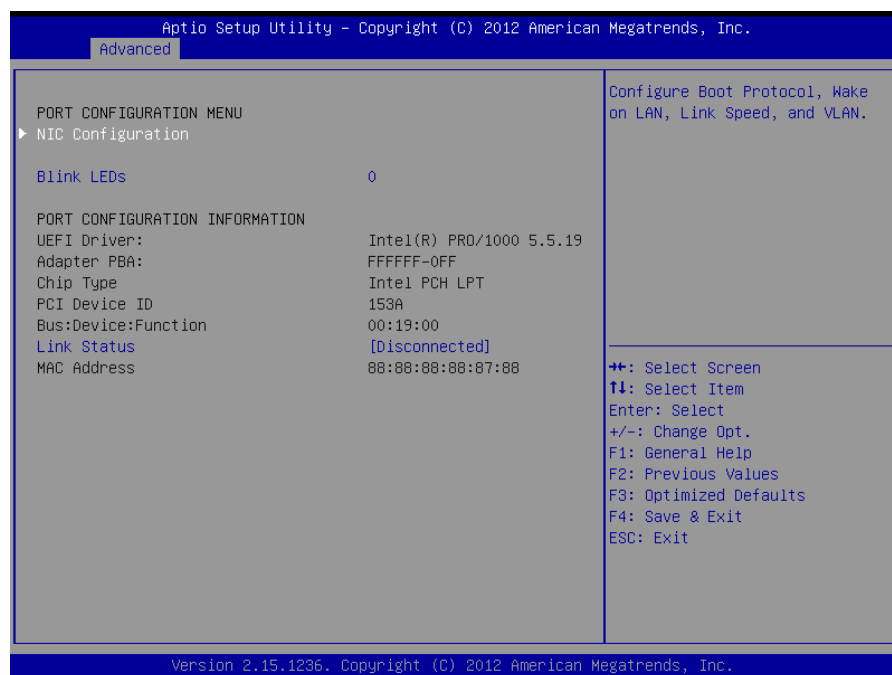


3.6.2.14.1 NIC Configuration

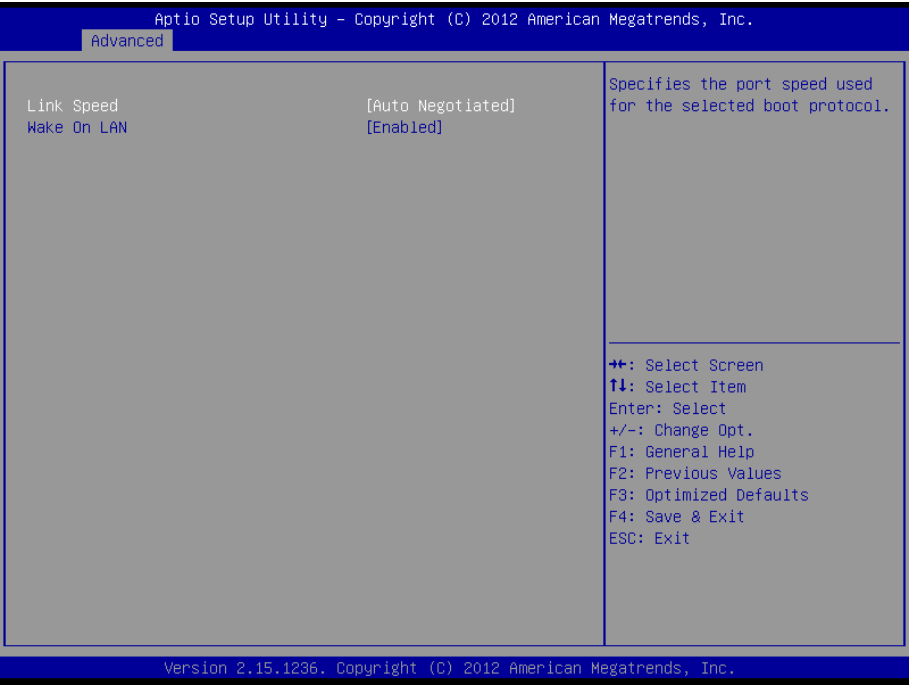

Item	Option	Description
Link Speed	Auto[Default] 10 Mbps Half 10 Mbps Full 100 Mbps Half 100 Mbps Full	Specifies the port speed used for the selected boot protocol.
Wake On LAN	Disabled Enabled[Default]	Enables the server to be powered on using an in-band magic packet.

3.6.3 Chipset

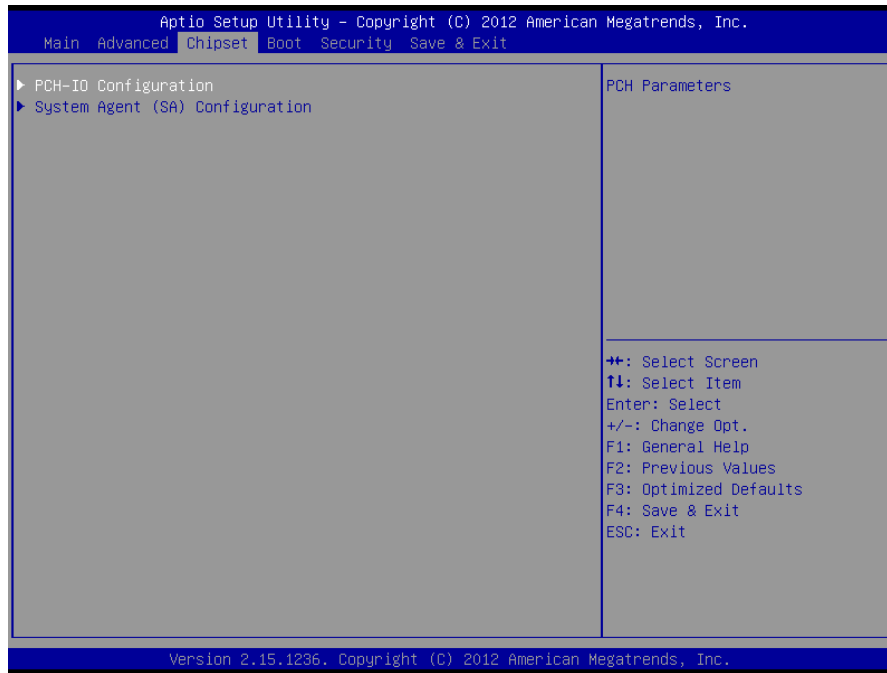

3.6.3.1 PCH-IO Configuration




Item	Option	Description
PCI Express Configuration	PCI Express Configuration settings.	
USB Configuration	USB Configuration settings.	
PCH Azalia Configuration	PCH Azalia Configuration settings.	
PCH LAN Controller	Disabled Enabled[Default]	Enable or disable onboard NIC.


ESM-QM87

SLP_S4 Assertion width	Disabled 1-2 Seconds 2-3 Seconds 3-4 Seconds 4-5 Seconds[Default]	Select a minimum assertion width of the SLP_S4# signal.
------------------------	---	---

3.6.3.1.1 PCI Express Configuration

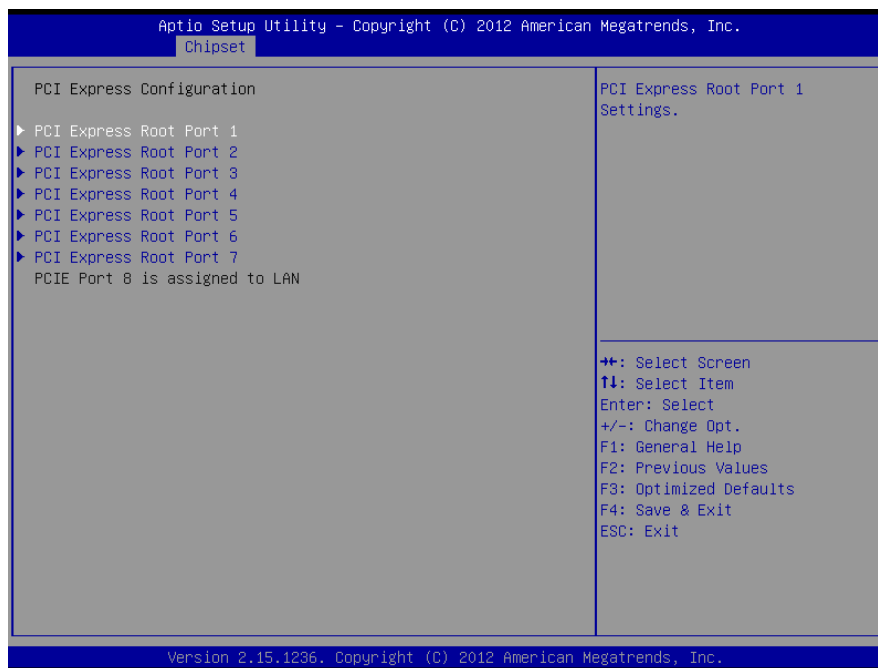

3.6.3.1.1.1 PCI Express Root Port 1/2/3/4/5/6/7

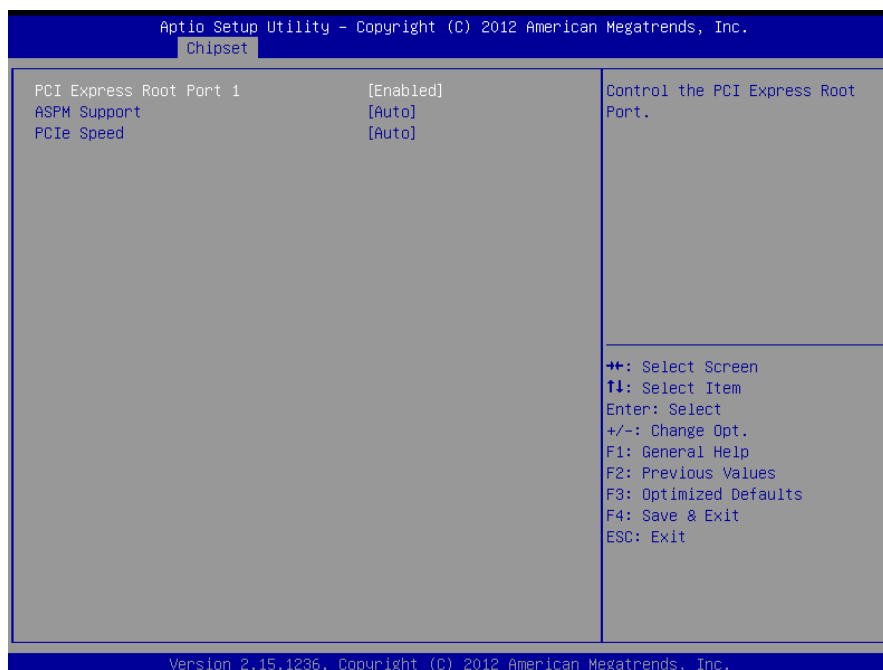

Quick Installation Guide


Item	Option	Description
PCI Express Root Port 1	Disabled Enabled[Default]	Control the PCI Express Root Port.
ASPM Support	Disabled L0s L1 L0sL1 Auto[Default]	Set the ASPM Level: Force L0s – Force all links to L0s State : AUTO – BIOS auto configure : DISABLE – Disables ASPM.
PCIe Speed	Auto[Default] Gen1 Gen2	Select PCI Express port speed.

3.6.3.1.2 USB Configuration




Item	Option	Description
xHCI Mode	Smart Auto[Default] Disabled	Mode of operation of xHCI controller.
USB Ports Per-Port Disable Control	Disabled[Default] Enabled	Control each of the USB disabling.

3.6.3.1.3 PCH Azalia Configuration

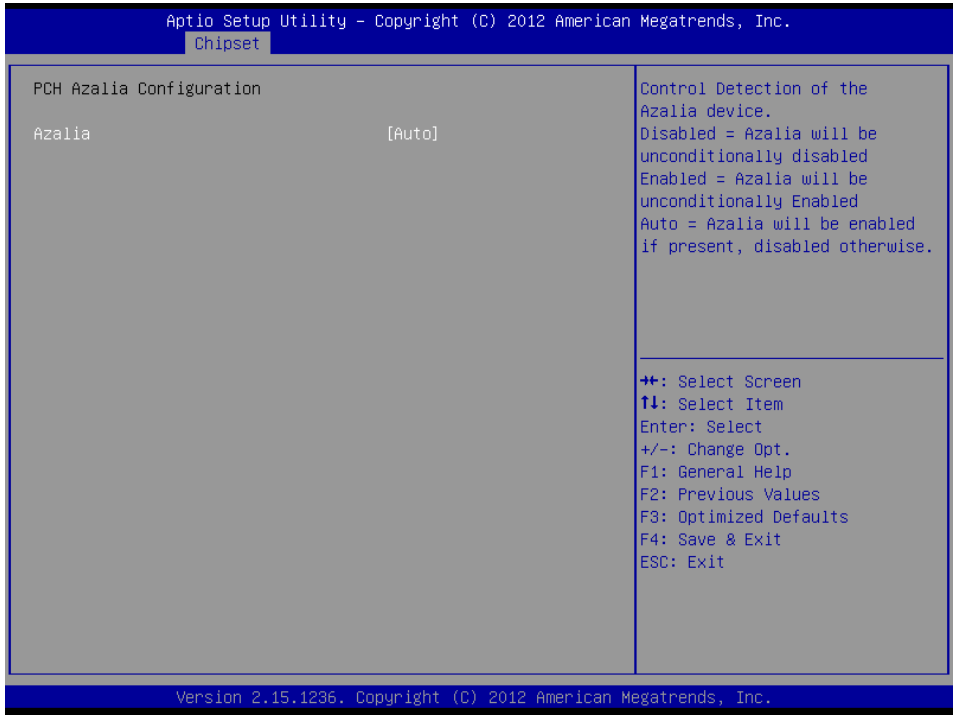


Item	Option	Description
Azalia	Disabled Enabled Auto[Default]	Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally Enabled. Auto = Azalia will be enabled if present, disabled otherwise.

3.6.3.2 System Agent (SA) Configuration

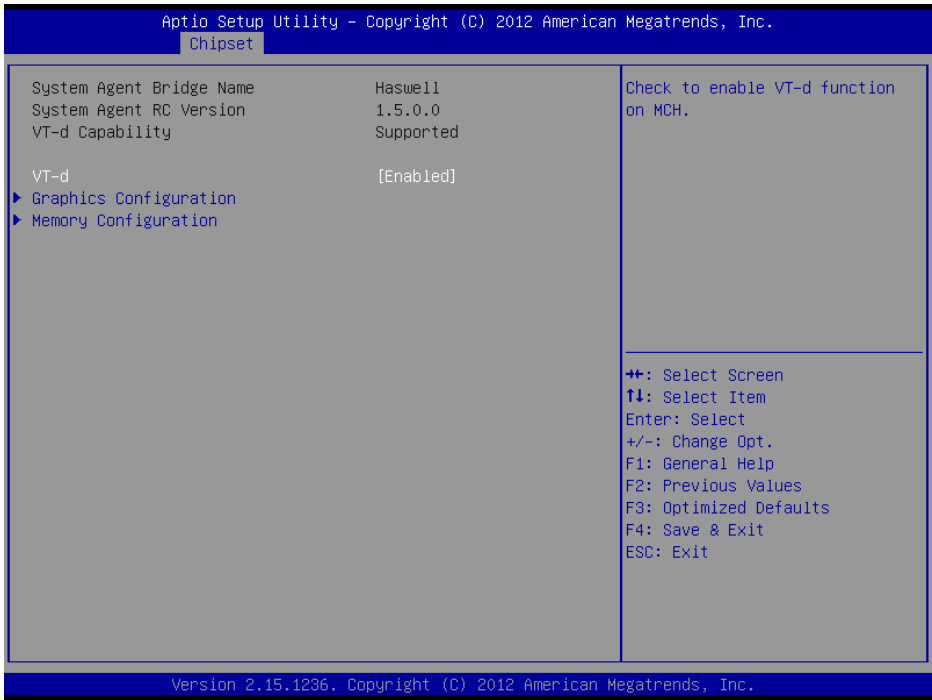


Item	Option	Description
VT-d	Disabled Enabled[Default]	Check to enable VT-d function on MCH.

3.6.3.2.1 Graphics Configuration

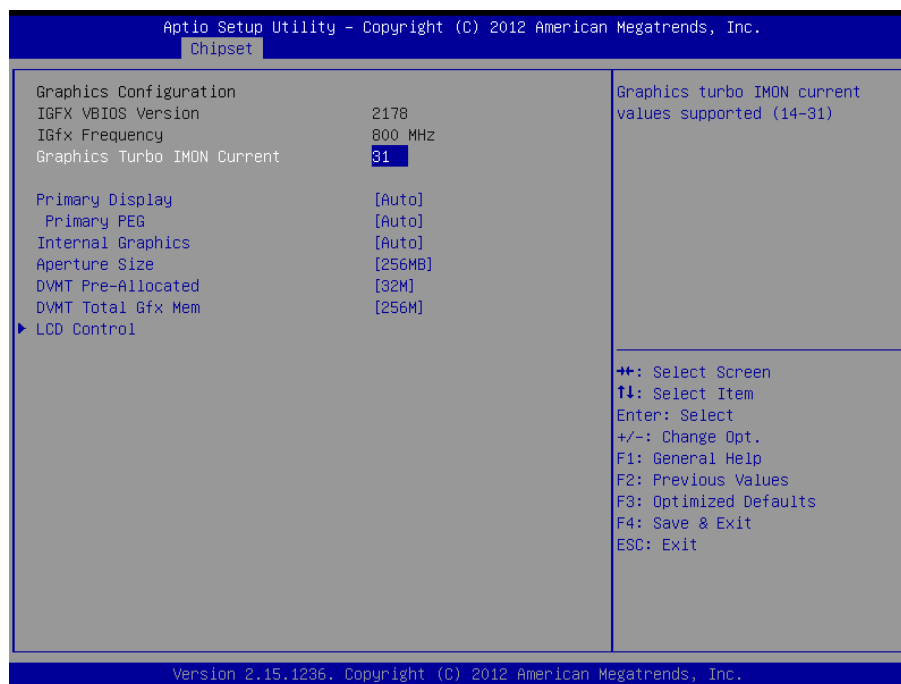

Item	Option	Description
Graphics Turbo IMON Current	14-31[Default]	Graphics turbo IMON current values supported (14-31).
Primary Display	Auto[Default] IGFX PEG PCIE	Select which of IGFX/PCIE Graphics device should be Primary Display.
Primary PEG	Auto[Default] PEG11 PEG12	Select PEG0/PEG1/PEG2/PEG3 Graphics device should be Primary PEG.
Internal Graphics	Auto[Default] Disabled Enabled	Keep IGD enabled based on the setup options.
Aperture Size	128 MB 256 MB[Default] 512 MB	Select the Aperture Size.
DVMT Pre-Allocated	32M[Default]/64M/96M/128M/160M/192M/224M/256M/288M/320M/352M/384M/416M/448M/480M/512M/1024M	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	128M 256M[Default] Max	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.


3.6.3.2.1.1 LCD Control

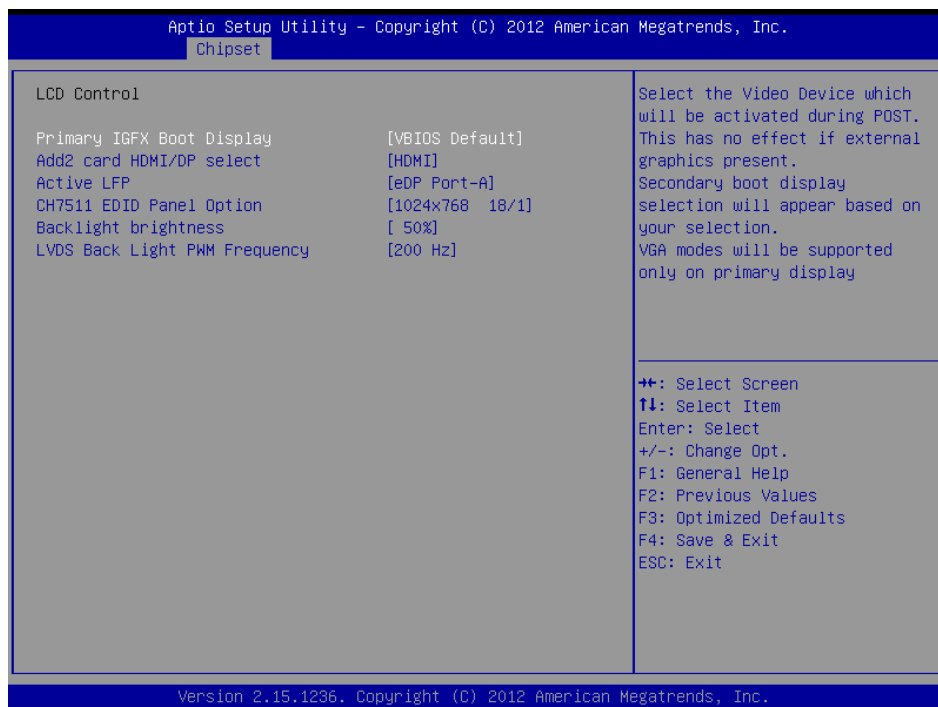

Item	Option	Description
Primary IGFX Boot Display	VBIOS Default[Default] CRT Port-C HDMI LVDS Port-D DP Port-B (Add2 Card)	Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.
Add2 card HDMI/DP select	HDMI[Default] DP	Select Add2 card display as HDMI or DP.
Active LFP	No LVDS eDP Port-A[Default]	Select the Active LFP Configuration. No LVDS : VBIOS does not enable LVDS. Int-LVDS :VBIOS enables LVDS driver by Integrated encoder. SDVO LVDS : VBIOS enables LVDS driver by SDVO encoder. eDP Port-A :LFP Driven by Int-DisplayPort encoder from Port-A. eDP Port-D :LFP Driven by Int-DisplayPort encoder from Port-D(through PCH).
CH7511 EDID Panel Option	1024x768 24/1 800x600 18/1 1024x768 18/1[Default] 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 640x480 18/1 800x400 18/1	Port1-EDP to LVDS(Chrotel 7511) Panel EDID Option.

	1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 1680x1050 24/2	
Backlight brightness	00% 25% 50% [Default] 75% 100%	Select LVDS back light PWM duty.
LVDS Back Light PWM Frequency	200 Hz [Default] 300 Hz 400 Hz 500 Hz 700 Hz 1 kHz 2 kHz 3 kHz 5 kHz 10 kHz 20 kHz	Select LVDS back light PWM Frequency.


3.6.3.2.2 Memory Configuration

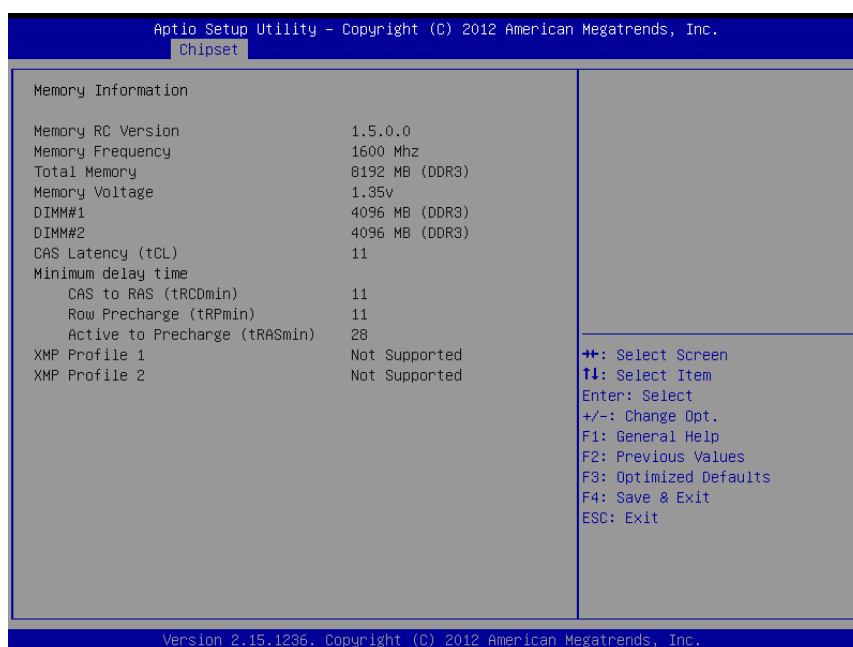

The information in this page may be different depends on user's memory usage.


ESM-QM87

3.6.4 Boot

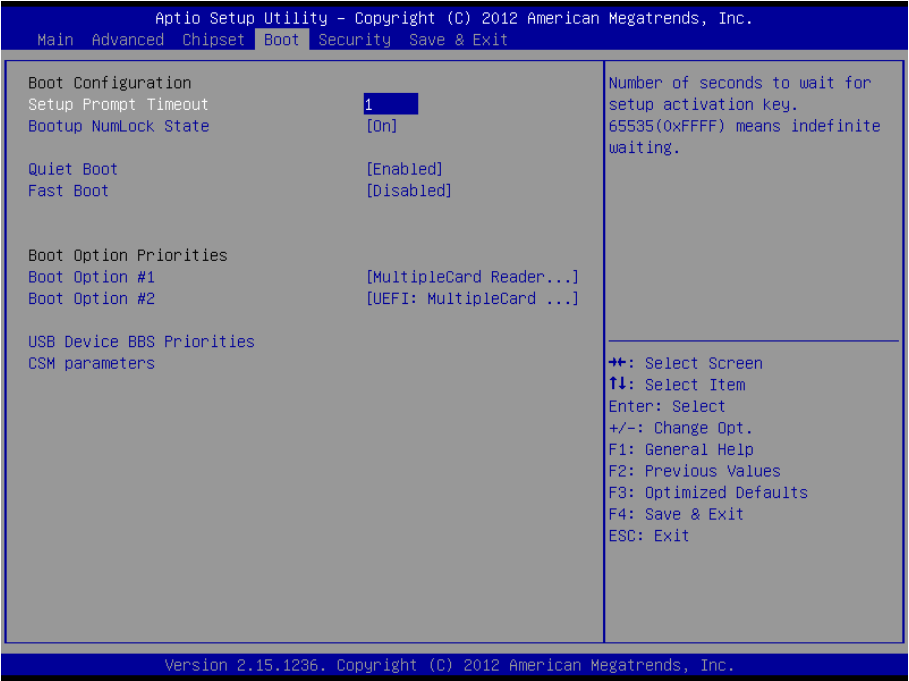

Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the Keyboard NumLock state
Quiet Boot	Disabled Enabled[Default]	Enables or disables Quiet Boot option
Fast Boot	Disabled[Default] Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Boot Option Priorities	Sets the system boot order	
CSM parameters	OpROM execution, boot options filter, etc.	


3.6.4.1 CSM parameters

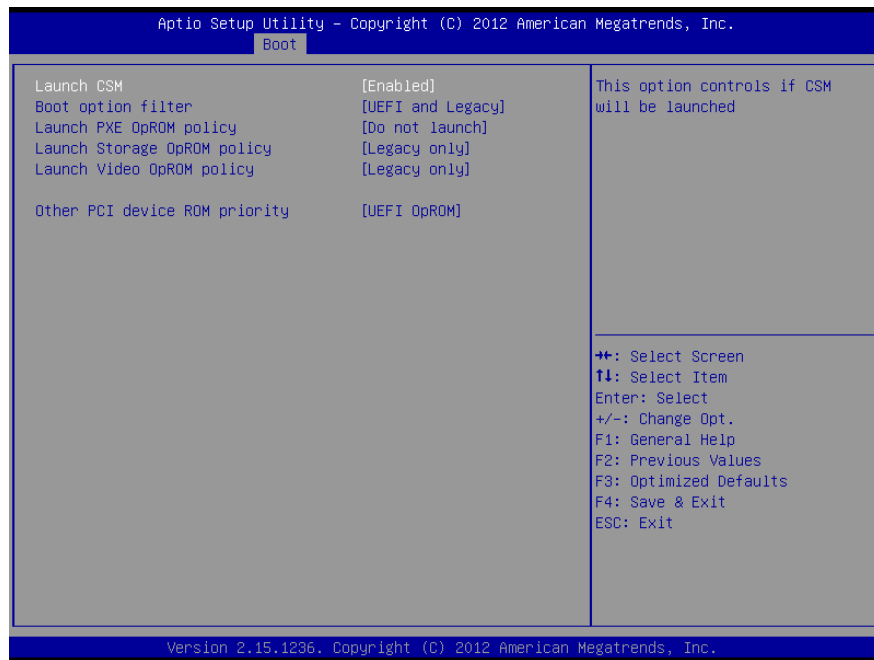

Item	Option	Description
Launch CSM	Disabled Enabled [Default]	This option controls if CSM will be launched.
Boot Option filter	UEFI and Legacy [Default] Legacy only UEFI only	This option controls what devices system can boot to.
Launch PXE OpROM policy	Do not launch [Default] UEFI only Legacy only	Controls the execution of UEFI and Legacy PXE OpROM.
Launch Storage OpROM policy	Do not launch UEFI only Legacy only [Default]	Controls the execution of UEFI and Legacy Storage OpROM.
Launch Video OpROM policy	Do not launch UEFI only Legacy only [Default]	Controls the execution of UEFI and Legacy Video OpROM.
Other PCI device ROM priority	UEFI OpROM [Default] Legacy OpROM	For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

ESM-QM87

3.6.5 Security

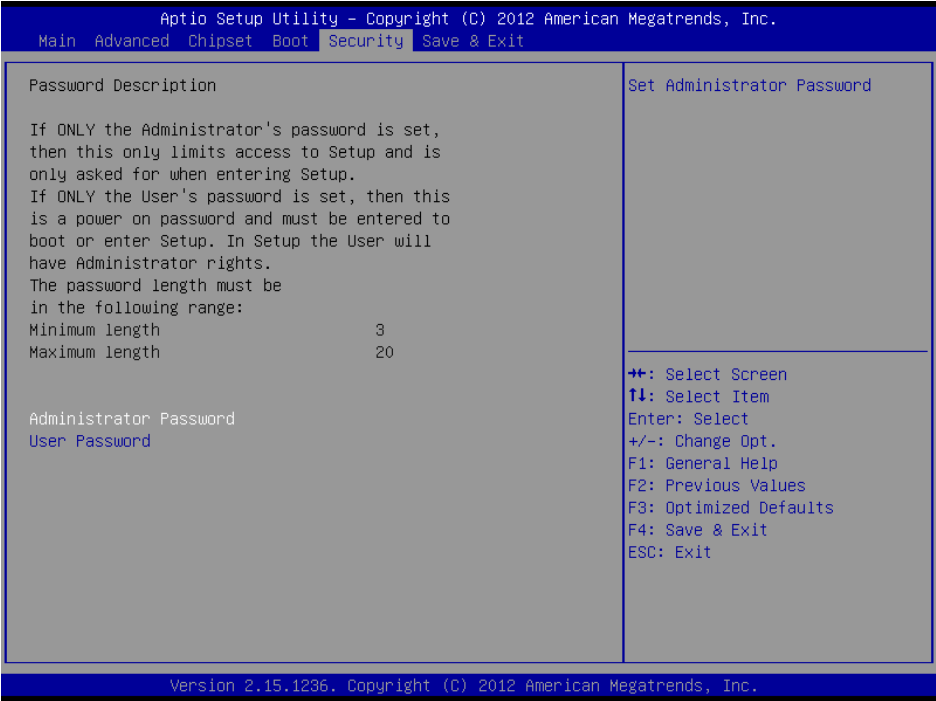


- Administrator Password

Set setup Administrator Password

- User Password

Set User Password

3.6.6 Save and exit

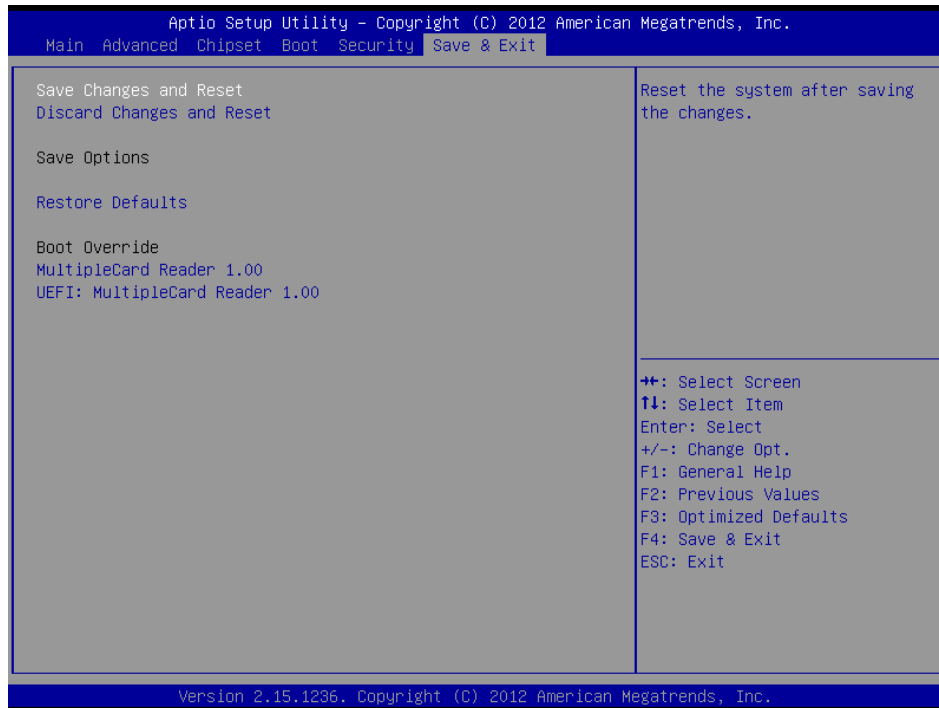

3.6.6.1 *Save Changes and Reset*

Reset the system after saving the changes.

3.6.6.2 *Discard Changes and Reset*

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

3.6.6.3 *Restore Defaults*

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

4. Drivers Installation



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

4.1 Install Chipset Driver (For Intel QM87)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to \Driver_Chipset\Intel\ESM-QM87.




Note: The installation procedures and screen shots in this section are based on Windows 7 operation system. If the warning message appears while the installation process, click Continue to go on.




Step1. Click Next.



Step 2. Click Yes.

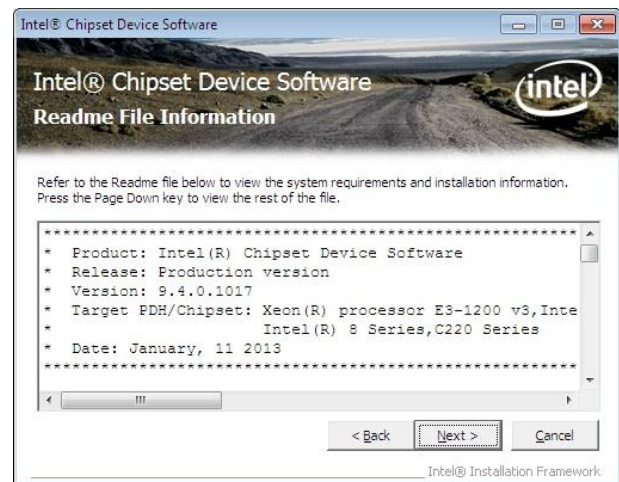

Step 3. Click Next.

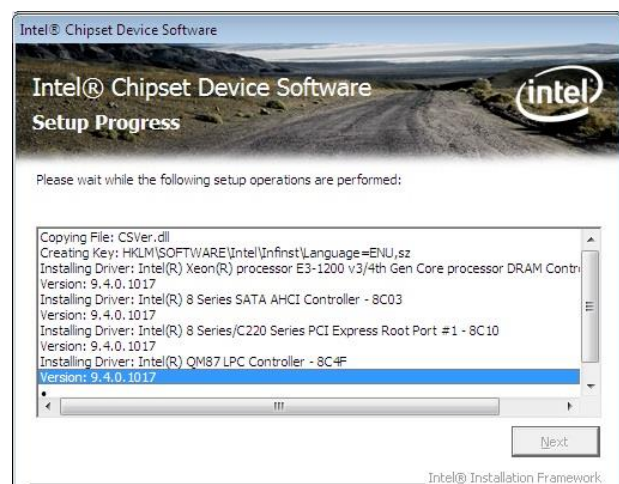

Step 4. Click Next.



Step 5. Click Next.

ESM-QM87




Step 6. Click **Finish** to complete setup.

4.2 Install Display Driver (For Intel QM87)


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\\Driver_Video\\ESM-QM87**.



Note: The installation procedures and screen shots in this section are based on Windows 7 operation system.

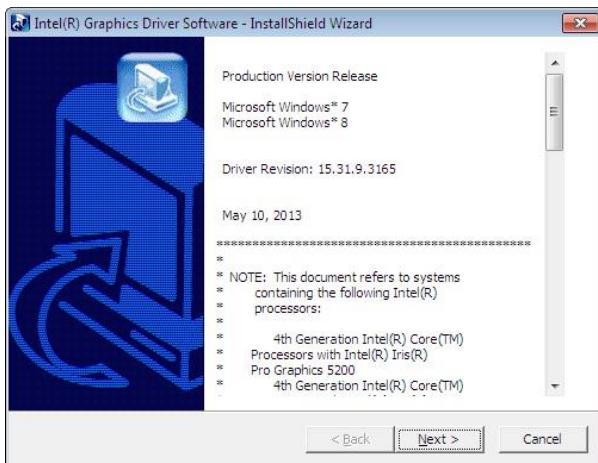


Step 1. Click **Next** to continue installation.

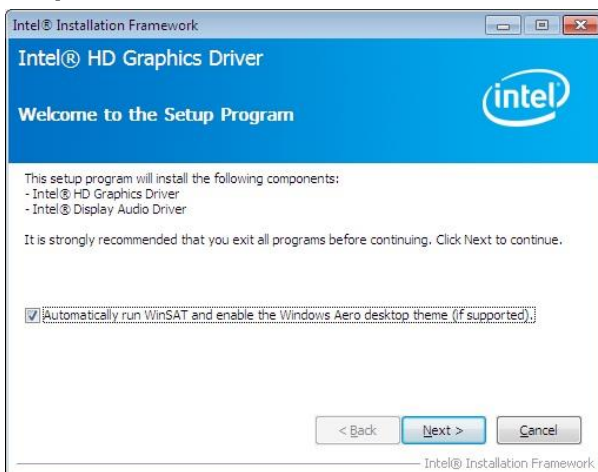


Step 2. Click **Next**.



Step 3. Click **Yes** to accept license agreement.

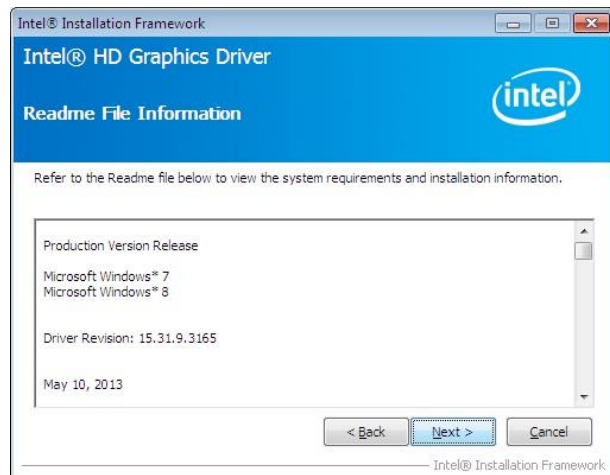


Step 4. Click **Next**.

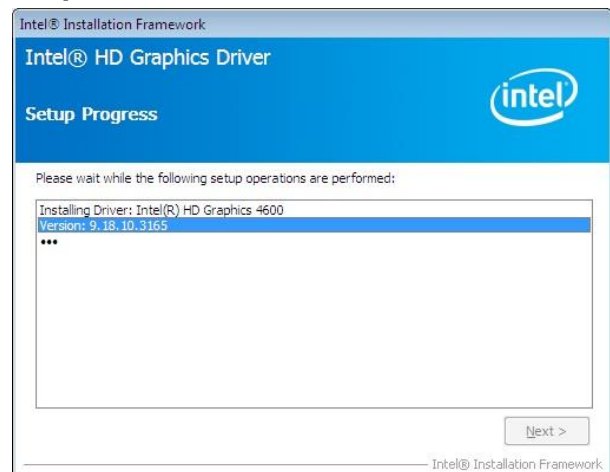

Step 5. Wait while installing.

ESM-QM87

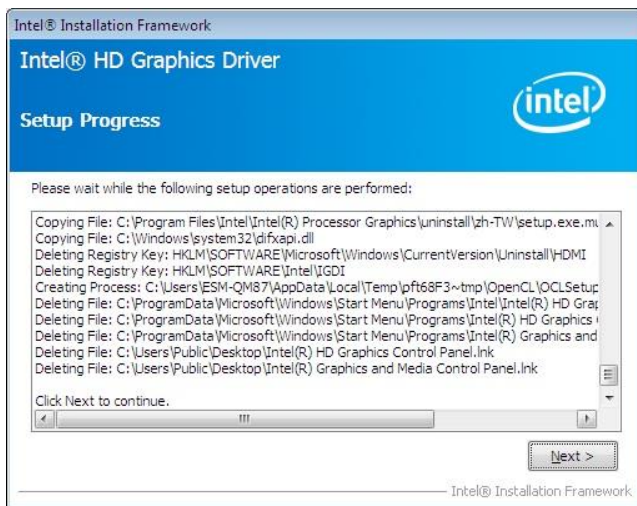

Step 6. Click Next.




Step 7. Click Finish to complete setup.

4.3 Install LAN Driver (For Intel I217LM)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to
\\Driver_Gigabit\\Intel\\I217LM\\ESM-QM87_LAN.




Note: The installation procedures and screen shots in this section are based on Windows 7 operation system.

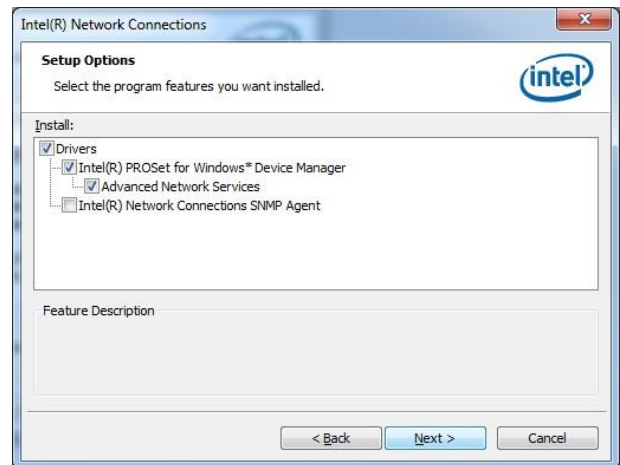


Step 3. Click Next.




Step 1. Click Next to continue installation.

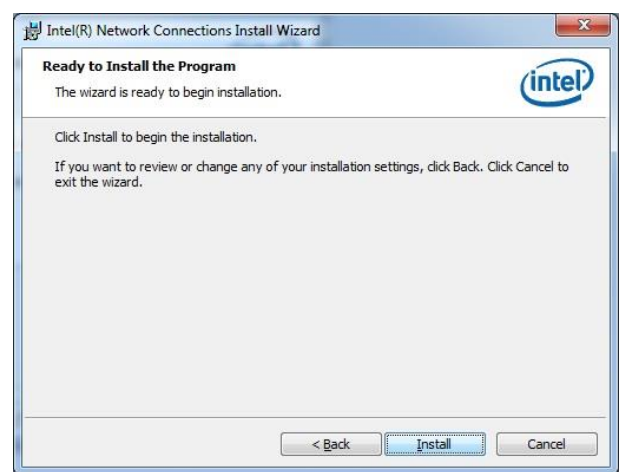

Step 4. Click Install.

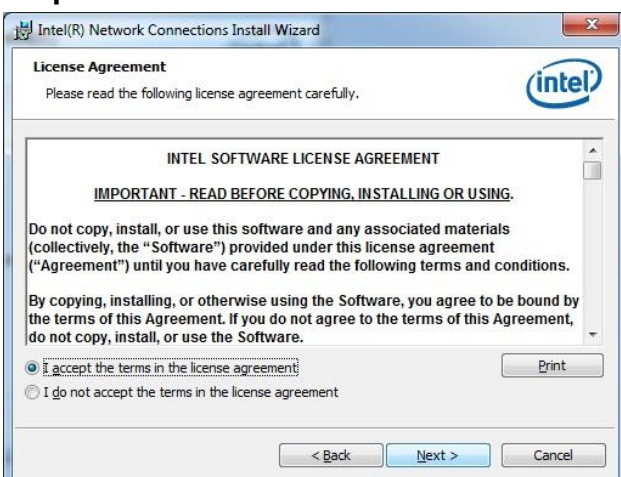

Step 2. Click Next.

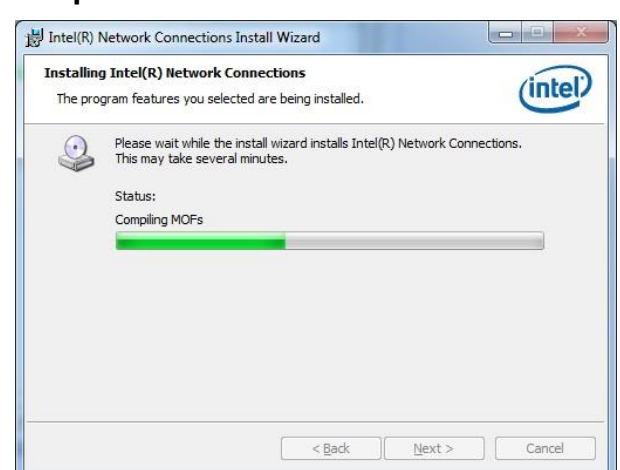

Step 5. Wait while installing.

ESM-QM87




Step 6. Click **Finish** to complete setup.

4.4 Install USB 3.0 Driver


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **Utility\ESM-QM87_USB3.0**.




Note: The installation procedures and screen shots in this section are based on Windows 7 operation system. If the warning message appears while the installation process, click Continue to go on.

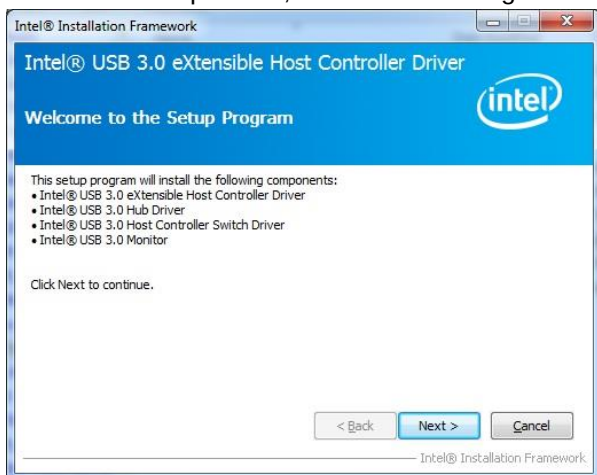

Step1. Click **Next** to start installation.

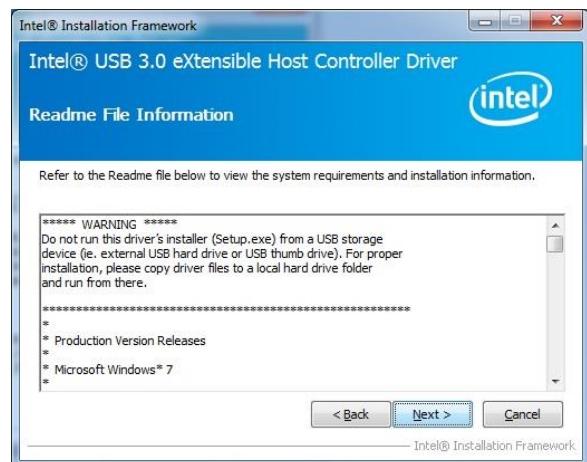


Step 3. Click **Next** to continue installation.

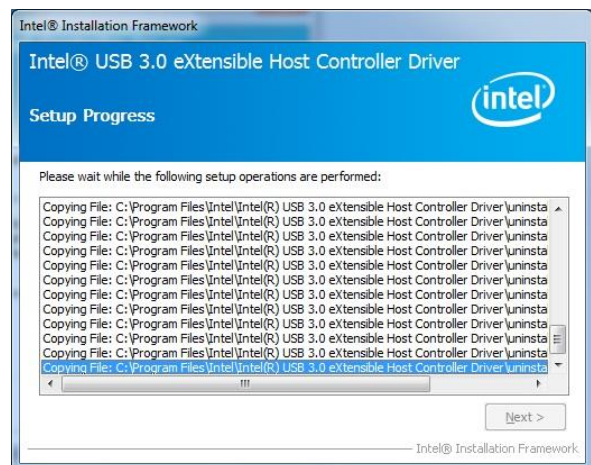

Step 4. Click **Next** to continue installation.




Step 2. Click **Yes**.

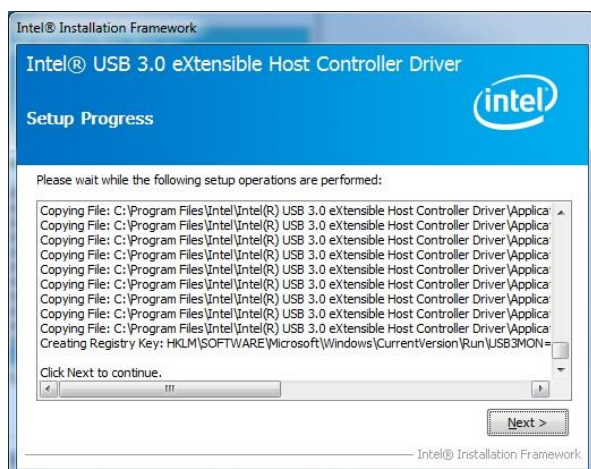

Step 5. Click **Next** to continue installation.

ESM-QM87

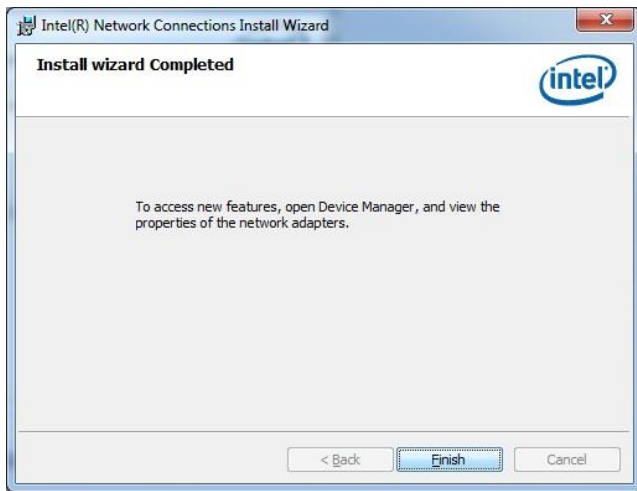


Step 6. Click **Finish** to complete setup.

4.5 Install ME Driver


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to \Utility\ESM-QM87_ME.




Note: The installation procedures and screen shots in this section are based on Windows 7 operation system. If the warning message appears while the installation process, click Continue to go on.

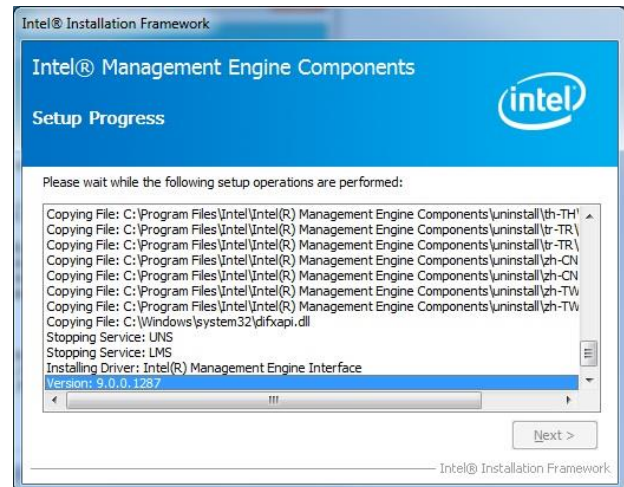


Step 3. Wait while installing.

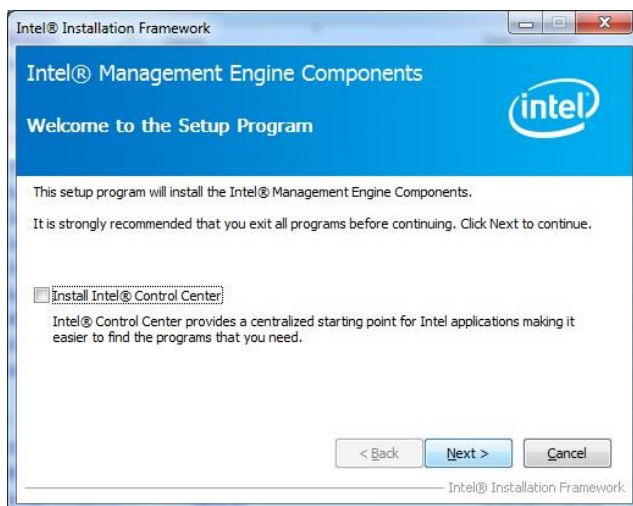

Step1. Click Next to start installation.

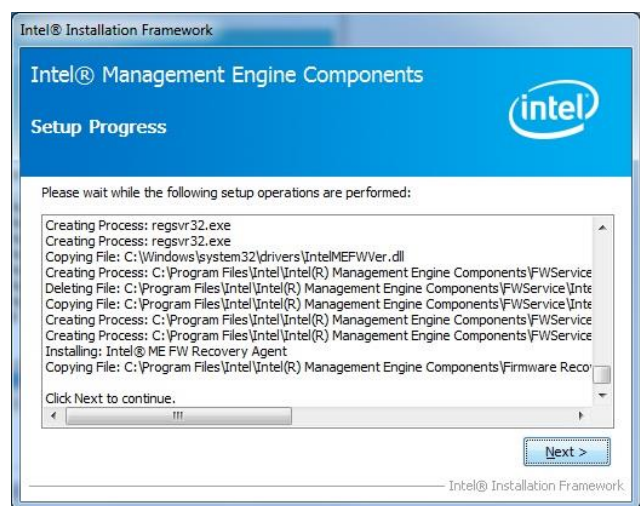

Step 4. Click Next.

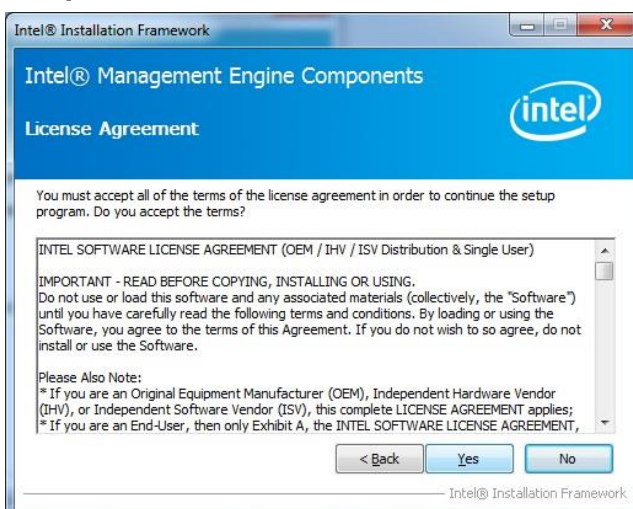


Step 2. Click Yes to accept license agreement.



Step 5. Click Finish to complete setup.

5. Mechanical Drawing

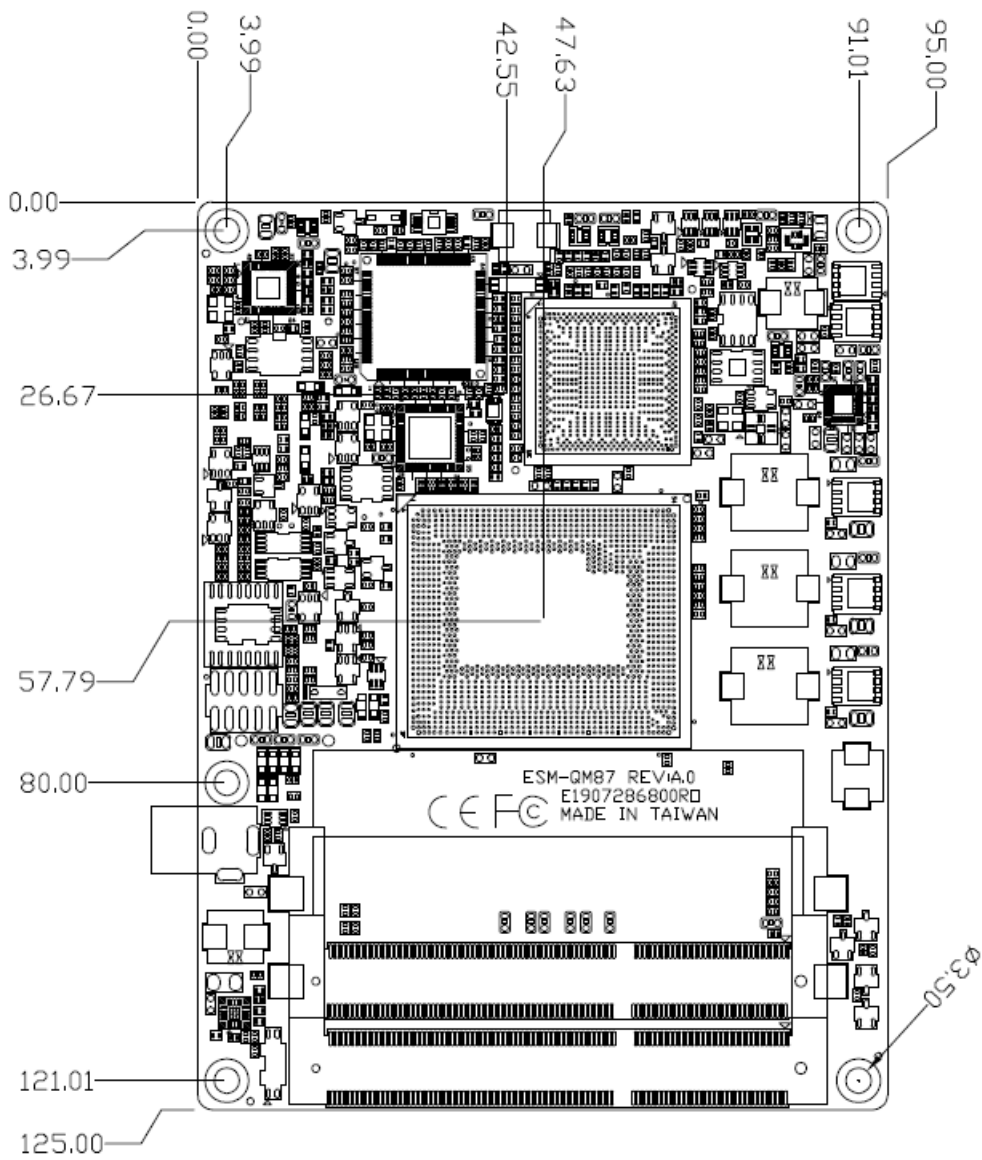

Unit: mm

